 




Electrolux

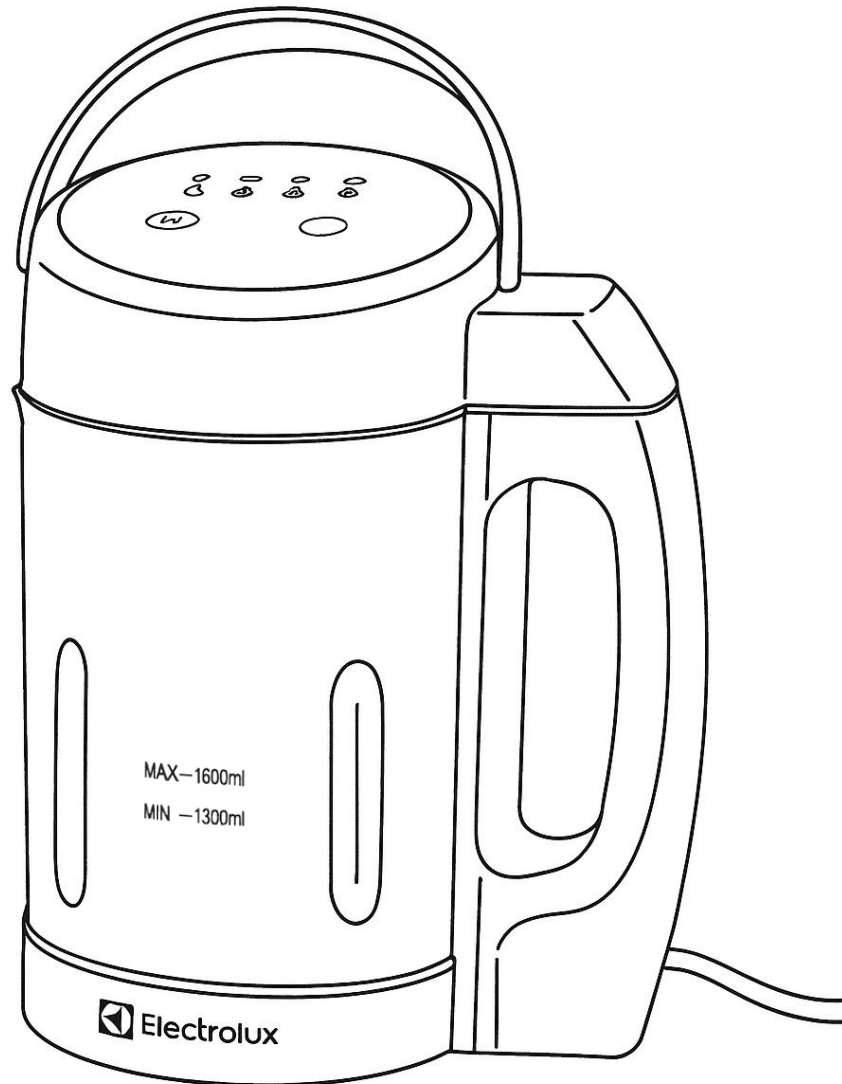

1.6L Soup Maker
SDA2843

Page No.

2	Contents
3	Reading and Storing the User Manual
3-5	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	What's in the Box
8	Description of Parts
8	Description of Control Panel
9	Before First Use of Your Soup Maker
9	Using Your Soup Maker – Description of Programs
10-12	Using Your Soup Maker
12	Care & Maintenance of Your Soup Maker
12	Mains Plug Information
13	Technical Specifications
13	Recycling Information
14	Customer Support
15	Troubleshooting
16	FSC and Safety Marks
17-19	Recipe Notes
Back Cover	Warranty Information

Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE


Whilst using electrical appliances, basic safety precautions should always be followed.

- **Read and familiarise yourself with all operating instructions before using this Soup maker.**
- Before plugging your unit into the mains, visually check that it is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- **DO NOT** immerse this appliance in water or any other liquids.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children from 0 to 8 years.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Important Safety Instructions for Proper Use

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Cleaning and user maintenance shall not be made by children.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Regular, periodic checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the supply cord is damaged it is to be replaced by qualified personnel in order to avoid a hazard.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.



 



Important Safety Instructions for Proper Use

- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- **CAUTION:** The blade assembly is extremely sharp, handle with care. When handling the blade lid assembly always hold by the handle.
- **DO NOT ATTEMPT TO SHARPEN THE BLADES**
- **DO NOT** use the appliance if the blade assembly is bent or damaged.
- **DO NOT** overfill past the max mark.
- This appliance includes a heating function.
- **DO NOT** operate the appliance whilst it is empty.
- **CAUTION:** Use the handles on the appliance to lift or move the jug. **Use heat protective/oven gloves** when handling the jug.
- Always remove the plug and lid when serving from the jug.
- **DO NOT** touch hot surfaces. The outer surfaces are liable to get hot during use. Always use the handles and knobs. 
- Unplug after each use. Grasp the plug, not the cord.
- **CAUTION:** If the Soup maker is overfilled, boiling liquid may be ejected.

THIS APPLIANCE MUST BE EARTHED

Explanation of Symbols

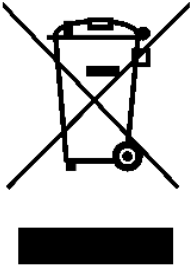
The following warning symbols or words are used in this instruction manual:

	<p>Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.</p>
	<p>Products labelled with this symbol conform to applicable provisions of the European Economic Area.</p>
	<p>You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.</p>
	<p>This symbol indicates that the supply uses an alternating current mains supply.</p>
	<p>This designates a hazard with moderate risk, which may result in severe injury if not adhered to.</p>
	<p>This symbol indicates that the surface gets hot and care must be taken.</p>


What's in the Box

- Soup Maker
- Mains Lead
- User Manual (This Booklet)

 
Description of Parts

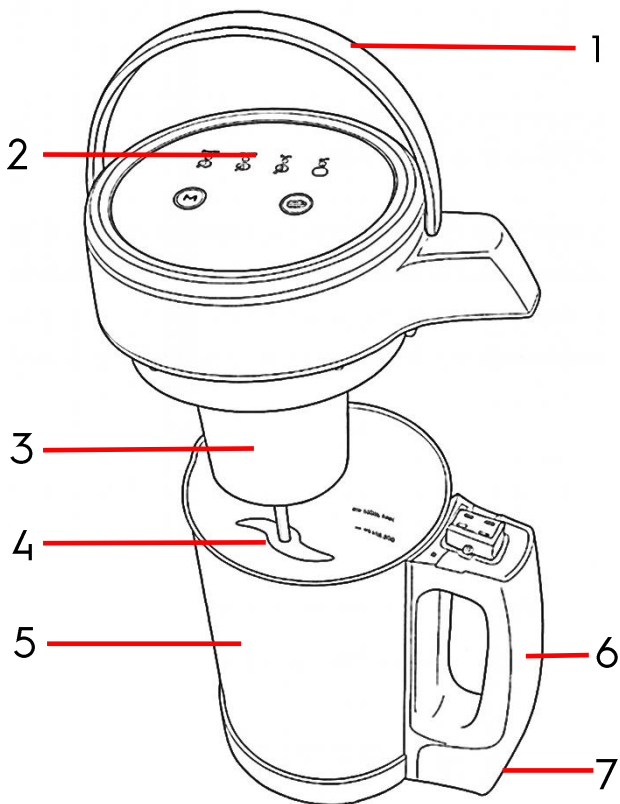

 1. Lid handle
2. Control Panel
3. Motor Assembly
4. Blades
5. Soup Maker Jug
6. Jug Handle
7. Power Socket
8. Power Cable

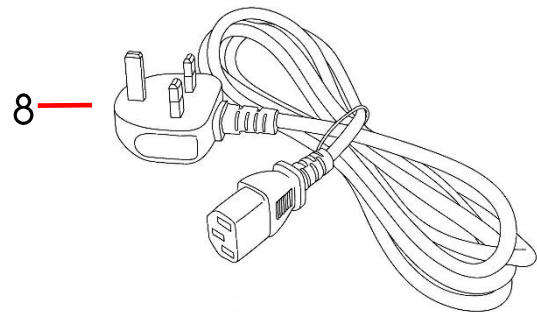

Description of Control Panel

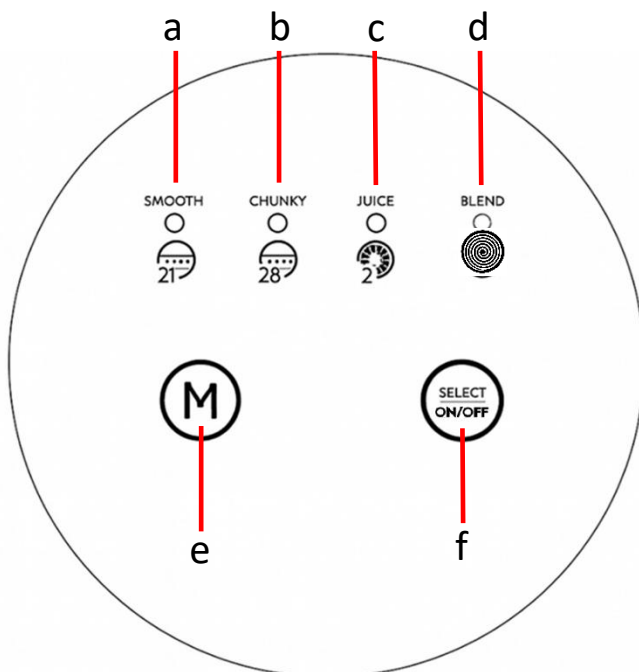 





- a. Smooth Icon
- b. Chunky Icon
- c. Juice Icon
- d. Blend Icon
- e. Mode Selection
- f. On/Off Select

Before First use of Your Soup Maker

- Remove all packing materials and dispose of responsibly.
- Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
- lift off the lid and wash the inside of the jug in a mild detergent and then rinse and dry thoroughly before use.
- Do not immerse the jug in water or any other liquids.




CAUTION: the lid housing contains extremely sharp blades and should be handled with care at all times.

Using Your Soup Maker – Description of Programs

Function	Description	Program Time
Smooth 	Select the Smooth programme to produce a hot, thorough mix and blend of ingredients. This is ideal for such classic dishes as Tomato and Basil Soup.	21 Minutes
Chunky 	Select Chunky to make hot, thick, chunky soups using thick chunks of meat and veg. This programme will only heat the contents and does not blend. Therefore, ensure to chop the ingredients to your preferred size, the smaller the chunks the better the spread of heat throughout the dish.	28 Minutes
Juice 	Select the Juice programme to make smoothies or milkshakes. The ingredients are not heated so all kinds of cold drinks can be made. NOTE Do not place Ice Cubes into the Soup maker	2 Minutes
Blend 	Additional blending. The Blend programme allows a further blend if required. This function does not heat but allows pulse blending of the ingredients. To enable this function after cooking, reset the Soup maker by unplugging from the mains and then plugging it back in. After selecting Blend, press the On/Off select (f) button to pulse blend the ingredients.	N/A



NB It is recommended that blending time is carried out in 30 second intervals in order to preserve the life of the motor.

   Using Your Soup Maker

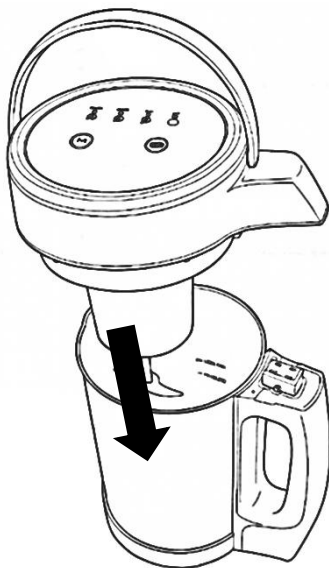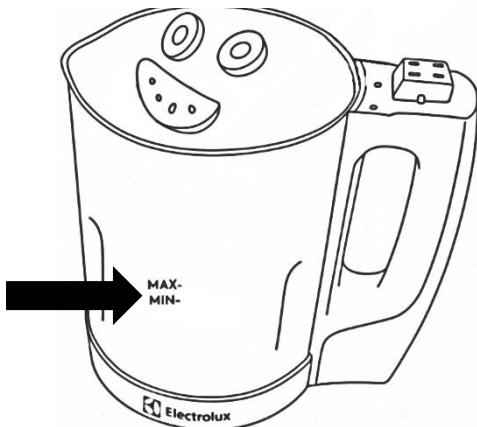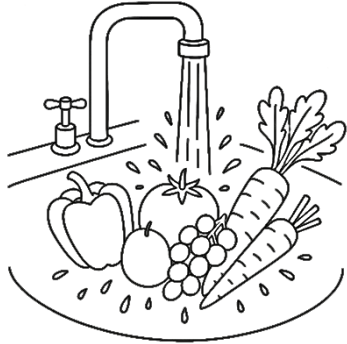

1. First Pre-wash any vegetables, fruit etc. required for your recipe.
2. Chop the ingredients no larger than 1.5 - 2.5cm square.
3. Remove the lid and place the ingredients into your **Soup Maker Jug (5)** and add water as needed.
4. Ensure the ingredients are above the 'MIN' mark on the jug but do not exceed the 'MAX' marking.
5. Ensure the Soup maker is placed on a solid, level, non-flammable surface.
6. Place the Lid on the jug.
7. Plug the Power Cable (8) into Power Socket (7).
8. Plug the mains plug into the nearest mains socket, the unit will emit a long beep to confirm that it is connected to the mains.
9. The function indicators a, b, c & d will flash alternately.

  Using Your Soup Maker

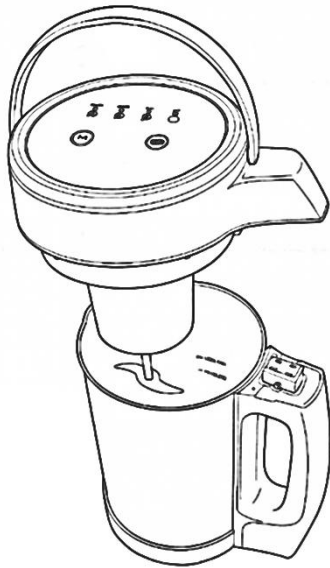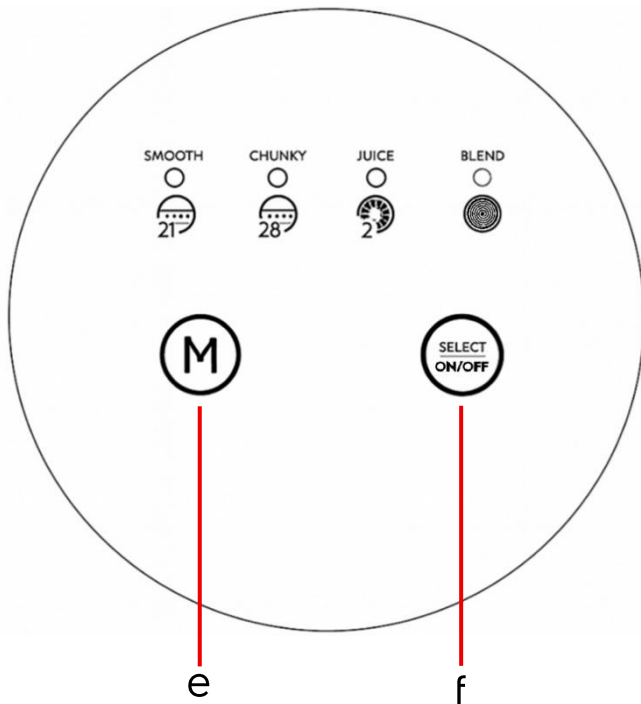

10. Using the table on page 9, press the **Mode Button** (e) to select from Smooth (hot soup), Chunky (hot soup) or Juice (cold smoothies, cold soups, milkshakes, etc.). The function indicator above the chosen programme will flash continuously.
11. Press the **On/Off Select** (f) to start the Soup maker on the selected programme. The soup maker will beep and the indicator light will stop flashing and remain on.
12. Once the programme has finished, the Soup maker will beep for 60 seconds and the four function Indicators (a), (b), (c), & (d) will also flash.
13. Unplug the Soup maker from the mains.
14. Remove the lid using the **Lid Handle** (1) being careful to avoid any steam emitted. (use of oven gloves is recommended).
15. Hold the Soup maker by the **Jug Handle** (6) pour and serve.

NB If the consistency of your soup is not blended satisfactorily, select **Blend** (d) using the **Mode Button** (e). Press the **On/Off Select** (f) button to pulse blend your food to the desired consistency.

To stop the current programme, press and hold the **On/Off Select** (f) button. To Switch off your soup maker, remove the **Power Cable** (8).

Using Your Soup Maker

NB Note, if no functions are selected, the soup maker will enter standby mode automatically.

Care & Maintenance of Your Soup Maker

- Always disconnect the Soup Maker from the mains power supply before cleaning.
- Rinse the jug out carefully and dry thoroughly.
- Clean the Lid housing by wiping with a clean damp cloth and dry thoroughly.
- Clean outside of the Soup maker with a clean damp cloth.
- Use a small brush to remove particles lodged around the blades. Care must be taken when cleaning the blades as they are sharp.
- Do not submerge either the lid housing or the jug in water or any other liquids.
- Never clean any part of the Soup maker with harsh chemicals or abrasive cleaners.

Mains Plug Information

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug **-DISCONNECT FROM THE MAINS-** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification


Model Number	SDA2843
Rated Voltage	220-240V~ 50/60Hz
Rated Power	Motor 140-160W, Heating 800-1000W
Protection Class	I (This appliance must be earthed)
Power consumption of equipment in Standby Mode shall not exceed 0,50W	0.49W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

Recycling Information

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
 Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
 Dispose of non-recyclable plastics in the appropriate plastics collection service.

 Disposal of the Product

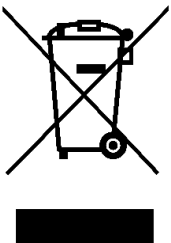

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeireland.ie to find your nearest recycling point.


Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@electroluxsmalldomesticappliance.co.uk

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Electrolux parts or accessories be used with this appliance.

Troubleshooting

Problem	Possible Cause	Possible Solution
Won't Switch on	Not plugged in properly	Ensure the power cord is securely inserted into both the soup maker and the wall socket.
	Faulty wall socket	Try plugging the soup maker into a different socket
	Lid not correctly seated onto the soup jug	Ensure the lid is properly aligned and the lid socket and plug are properly connected
	Blown Fuse or damaged cable	Inspect the cord for damage. Replace if frayed or melted. Check home fuse box or circuit breaker
Soup is not as required (ingredients are too large)	Vegetables not cut small enough prior to making your soup	Pre-chop large vegetables into smaller pieces. Use the blend function once the selected programme has finished
Soup is not as required (undercooked)	Too many ingredients or overfilled	Do not exceed the MAX line inside the jug. Remove some ingredients and try again.
Soup maker stopping	Too much food or food is too hard	Unplug the unit and check for stuck food. Clean blades carefully
Not Heating your soup	Incorrect programme selected	Ensure you are using a programme such as "Smooth" or "Chunky" that includes heating.
	Not enough liquid	Add water or broth to meet the MIN line. Heating sensors may not engage if liquid is too low.
Loud or unusual noise	Foreign object inside jug	Unplug and check the inside of the jug for utensils, bones, or hard debris.
	Loose blades or motor issues	If the sound is grinding or screeching, stop use immediately. Contact support.

 **UK
CA**

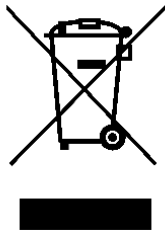

MIX
Paper | Supporting
responsible forestry
FSC® C202454



Electrolux

WARRANTY

Thank you for purchasing your Electrolux Product.

As part of our commitment to quality, we are offering you an extra 4 years warranty in addition to your 1 year guarantee

Your Electrolux product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 4-year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

help@electroluxsmalldomesticappliance.co.uk

or

Contact Us: www.electroluxfloorcare-sda.co.uk

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Produced and imported under licence by

Eurosonic Group Limited

Brightgate House

1 Brightgate Way

Manchester M32 0TB UK

EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006

www.esqltd.com

ELECTROLUX is a pending or registered trademark used under

license from AB Electrolux (publ)

Made in China