




Electrolux

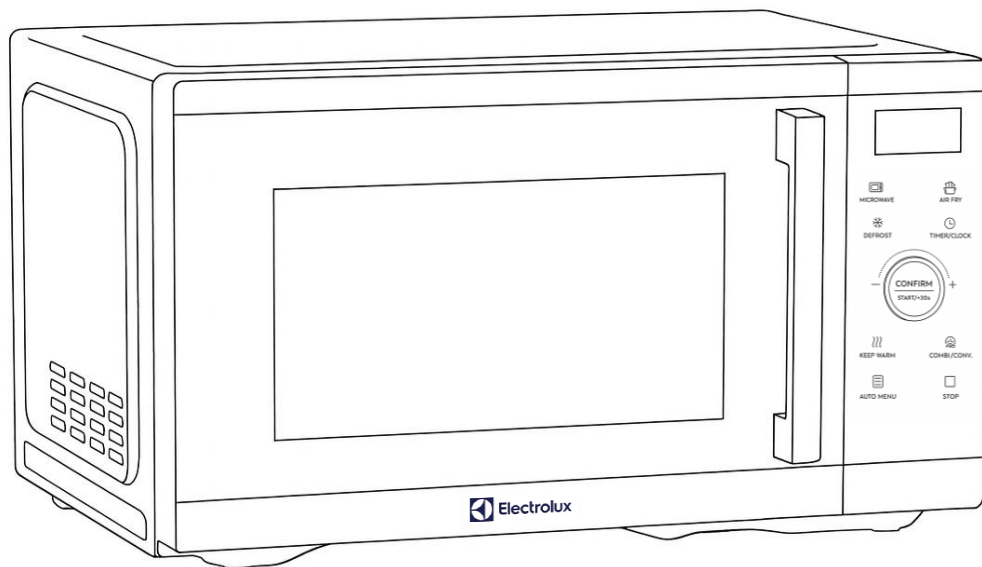

**AIR FRYER MICROWAVE
SDA2868**

User Manual

Contents

Page No.	
2	Contents
3-7	Important Safety Instructions
8	Additional Safety Information
9	Explanation of Symbols
10	What's in the Box
11	Installation
12	Description of Parts
13	Description of Parts – LED Display
13	Description of Parts – Control Panel
14	Before First Use of Your Air Fryer Microwave
14	Turntable Installation
15	Installing the Accessories
16	Instructions for Use
	Setting the Clock
	Using the Timer
	Lock Function
17	Microwave Cooking
	Express Microwave Cooking
18-20	Auto Menu
21	Air Fryer Presets
22	Combination Cooking – Microwave & Air Fryer
22	Convection Cooking with Preheat
22	Convection Cooking without Preheat
23	Defrosting
	Defrosting by Weight
	Defrosting by Time
	Defrosting Tips
24	Keep Warm
24	Multistage Cooking
24	Cooling
25	Cooking Tips
25	Cooking Utensil Guidelines
26	Technical Specification
27	Troubleshooting
28-29	Cleaning and Maintenance
29	Servicing
30	Customer Support
31	Plug Wiring Information
31	Recycling Information
32	FSC and Safety Marks
Back Page	Warranty Information

Important Safety Instructions

Before using this product, please read through this manual. Failure to do so may result in personal injury or damage to the product. Carefully save this instruction manual for future reference.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- **DO NOT** touch hot surfaces. The outer surfaces are liable to get hot during use. Always use the handles and knobs.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.



Important Safety Instructions

- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by suitable qualified personnel to avoid a hazard.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.

Important Safety Instructions

- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord.
- **Caution:** Do not overcook food.
- Metallic containers for food and beverages are not allowed during microwave cooking.
- When heating food in plastic containers or paper containers, keep an eye on the oven due to the possibility of ignition.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- This appliance shall not be cleaned with a steam cleaner.
- The microwave oven is intended to be used free-standing.
- **DO NOT** place this microwave into a cabinet.
- **Caution:** Remove wire twists from paper and plastic bags before placing in the oven.
- **DO NOT** heat oil or fat for deep frying in the oven as the temperature of the fat cannot be controlled.
- After use wipe the waveguide cover with a damp cloth, followed by a dry cloth to remove any food splashes and grease. Built up grease may overheat and smoke or ignite.

Important Safety Instructions

- If materials inside the oven smoke or ignite, keep the door closed, turn oven off and disconnect the power supply in order to stifle any flames.
- **Caution:** Liquids and other foods must not be heated in sealed containers since they are liable to explode; Baby bottles fitted with a screw cap or teat are considered sealed containers.
- Liquids should be heated in a wide mouthed container and left for a short period after the heating cycle to avoid possible hazards such as delayed eruptive boiling of the liquid. Therefore, care must be taken when handling the container.
- Potatoes, sausage and other skinned foods should be pierced before heating.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- Only use utensils suitable for use in a microwave oven.
- **DO NOT** store food or other items in the oven.
- **DO NOT** operate the oven without any food or liquid inside, this may damage the oven.
- **Caution:** If the door or door seals are damaged or if the oven has malfunctioned, the oven must not be operated until it has been repaired by a competent person. It is hazardous for anybody other than a suitably qualified person to carry out any service or repair that involves the removal of a cover which gives protection against exposure to microwave energy.

Important Safety Instructions

- This microwave oven is intended for the heating of food and beverages. The drying of clothes, heating of warming pads, slippers, sponges, cloths, etc. may lead to risk of injury, ignition and fire.
- The oven should be cleaned regularly and any food deposit removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- **DO NOT** cover this appliance.
- **DO NOT** place this appliance on an electric, gas, or any other type of hob.

WARNING! Do not attempt to move the appliance whilst it is hot or contains hot food or liquids. Turn the appliance off and disconnect from the mains and let it cool sufficiently before moving it.

WARNING! Hot steam may be released when opening and closing the appliance during use. Risk of scalding!

WARNING! Always carry the appliance with both hands. Always use oven gloves. Burn hazard!



THIS APPLIANCE MUST BE EARTHED







Additional Safety Information

- **PLEASE NOTE:** Before use, ensure that the appliance is used in an open, well-ventilated area well away from other appliances and other obstructions.
- Do not use the appliance in front of, near or below combustible materials such as plastics, curtains or cupboards, etc.
- Do not place the appliance against a wall or against other appliances.
- Do not place anything on top of the appliance.
- The Waveguide Cover (3) should never be removed.
- Metallic containers shall never be used during Microwave cooking.
- Plastic containers shall never be used during Air Fry cooking.

WARNING! To Avoid Permanent Damage to Your Air Fryer Microwave, ensure the Baking Tray and the Grill Basket are removed from inside the unit before using the Microwave function.

Explanation of Symbols

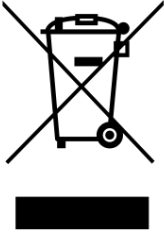The following warning symbols or words are used in this instruction manual:


	<p>Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements</p>
	<p>Products labelled with this symbol conform to applicable provisions of the European Economic Area.</p>
	<p>You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.</p>
	<p>This symbol indicates that the supply uses an alternating current mains supply.</p>
<p>WARNING!</p>	<p>This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.</p>
	<p>This product is class 1 and must be Earthed.</p>
	<p>This symbol indicates that the surface gets hot and care must be taken.</p>

What's in the Box

- Microwave
- Glass Turntable
- Turntable Support
- Baking Tray
- Grill Basket
- Instruction Manual (This Booklet)

Installation

- Select a level surface no less than 85cm (33 inches) from the floor, that provides enough space for the outlet vents.
- A minimum clearance of 5cm (2 inches) is required between the oven and any adjacent wall, with a minimum clearance of 10cm (4 inches) between the rear of the microwave and the wall.
- Leave a minimum clearance of 20cm (8 inches) above the oven.

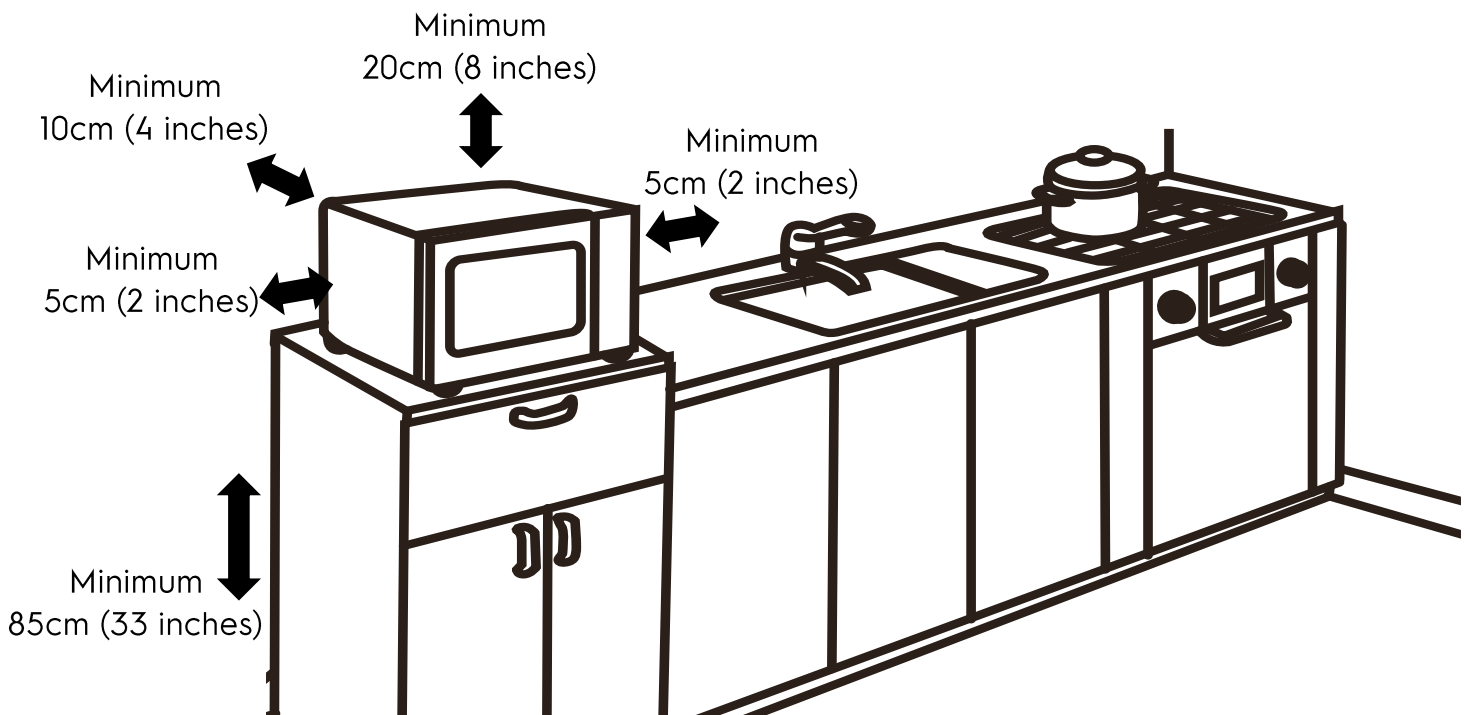


The door of the microwave oven must be fully closed for it to operate, this is due to a safety interlock between the locking mechanism and the control panel.

Place the turntable support in first, fit the turntable onto the turntable support and make sure it is geared in properly.

Never remove the waveguide cover. Ensure the turntable support is correctly located.


Description of Parts

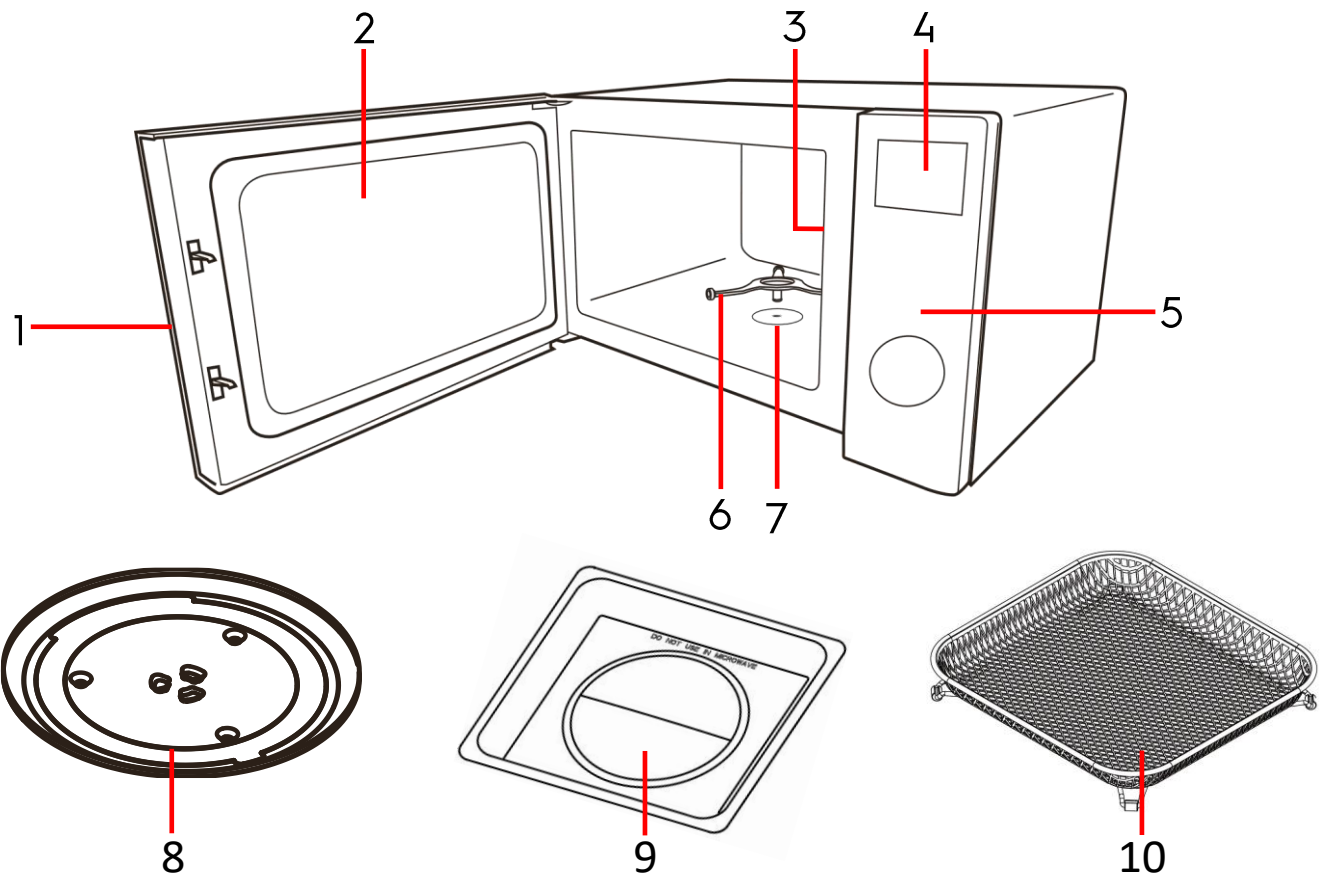

1. Door Handle
2. Door (with Viewing Window)
3. Waveguide Cover
4. LED Display
5. Control Panel
6. Turntable Support
7. Motor Spindle
8. Turntable
9. Baking Tray
10. Basket

- The **Baking Tray** (9) can be placed in either height setting in the appliance, please refer to **Accessories Installation** section.
WARNING! The **Baking Tray** (9) shall never be used whilst Microwave cooking.
- The **Basket** (10) should be used on top of the **Baking Tray** (9).
WARNING! The **Basket** (10) shall never be used whilst Microwave cooking.

Description of Parts – The LED Display (4)

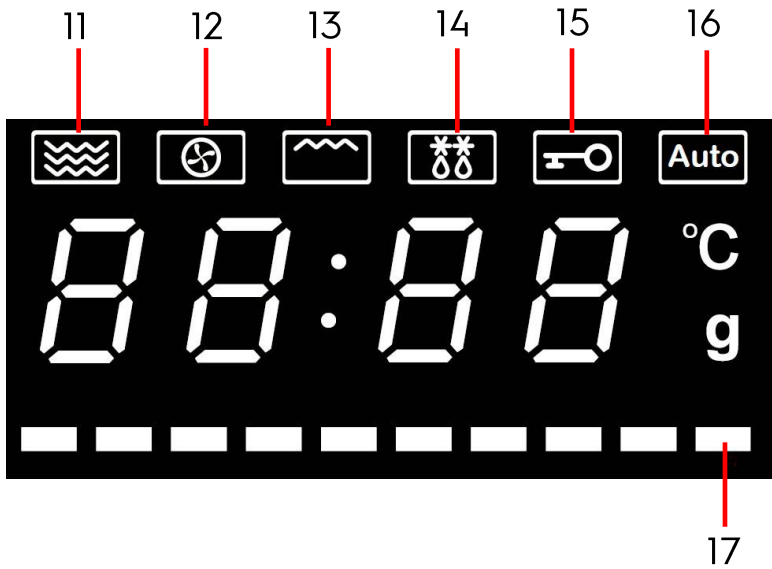

- 11. Microwave Indicator
- 12. Air Fry Indicator
- 13. Grill Indicator
- 14. Defrost Indicator
- 15. Lock Indicator
- 16. Auto Indicator
- 17. Air Fryer Power Level

Description of Parts – The Control Panel (5)

- **MICROWAVE**
Press to select the power levels of Microwave.
- **AIR FRY**
Press to select one of the Air Fry presets.
- **DEFROST**
Press to set the Defrost mode.
- **TIMER/CLOCK**
Press to set the clock or timer.
- **CONFIRM/START/+30 SEC.**
Turn the Confirm control to select one of the Auto Menu/Power Levels in standby mode.
Turn to set the temperature and time.
Press once to confirm the setting or start cooking.
- **KEEP WARM**
Press to select the Keep Warm preset
- **COMBI./CONV**
Press to set Combination cooking time.
- **AUTO MENU**
Press to select one of the Microwave Presets
- **STOP**
Press to pause, stop cooking, cancel or clear.
Press for 3 seconds to lock and unlock the
Control Panel (5).




Before First Use of Your Air Fryer Microwave

- Before use, retain all packaging until all the parts are present against the parts list – see Description of Parts above.
- Take care whilst opening the carton as a sharp blade may damage the product.
- After which discard packaging responsibly.
- Ensure that you clean the appliance with a damp cloth and dry thoroughly.
- Wash the accessories (8, 9 & 10) in warm soapy then rinse and dry thoroughly.

Turntable Installation



1. Place the oven on a solid level, heat resistant surface, observing the installation guidelines above.
2. Open the door and place the **Turntable Support** (6) onto the **Motor Spindle** (7) as shown right.
3. Place the **Turntable** (8) onto the **Turntable Support** (6).

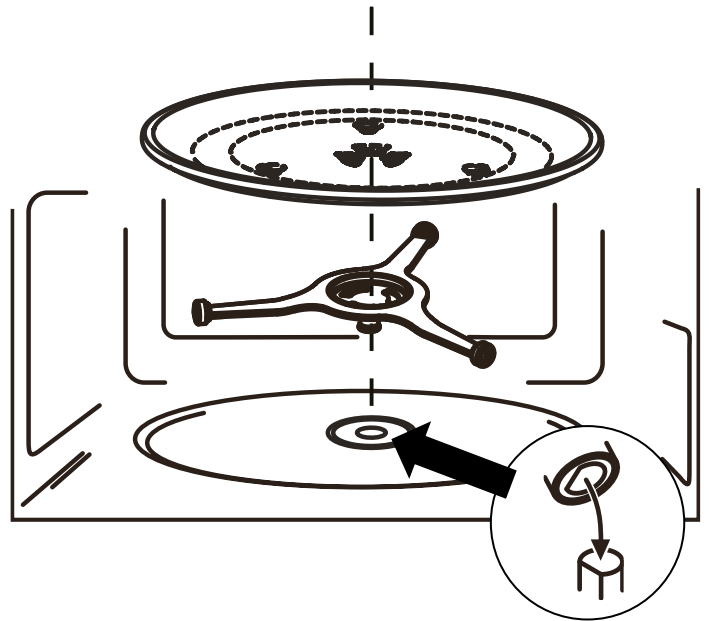

NB Rotate the **Turntable** (8) back and forth a little to ensure it settles inside the centre of the support ring.

Installing the Accessories

Slide the **Baking Tray** (9) into the oven in either the low or high positions, place the **Basket** (10) if required, on top of the tray.

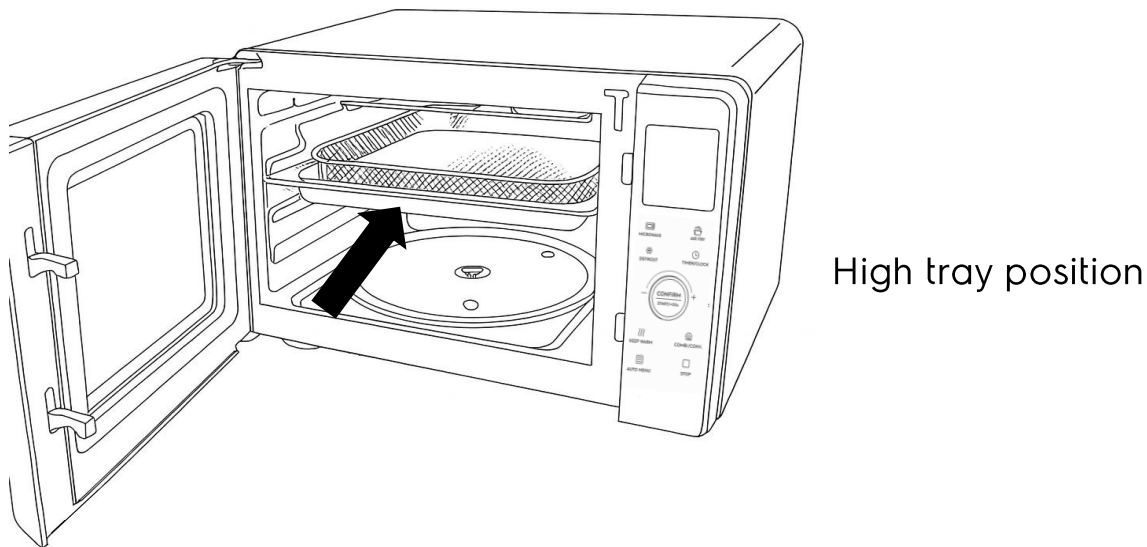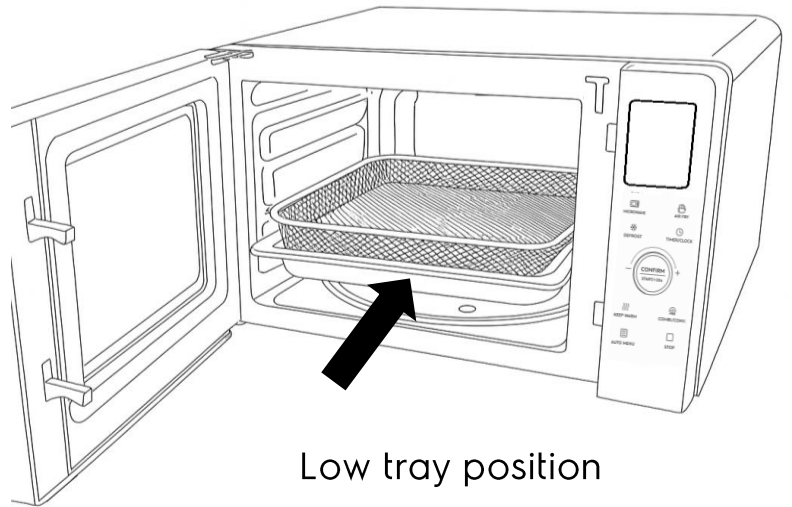


WARNING! Metal or Metallic containers shall never be used during Microwave cooking.

Always use oven gloves whilst handling the containers in the oven, as they will be very hot.

Instructions for Use

Setting the Clock


1. In standby mode, press the **TIMER/CLOCK** button twice, 00:00 will show on the **LED Display** (4).
2. Rotate the **CONFIRM** control to set the hour between 00 and 23.
3. Press the **TIMER/CLOCK** to confirm the hour.
4. Rotate the **CONFIRM** control to set the minutes between 00 and 59.
5. Press the **TIMER/CLOCK** to confirm the time.

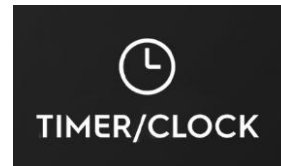

NB If the appliance is unplugged from the mains supply, the clock will have to be reset.


Using the Kitchen Timer

1. In standby mode, press the **TIMER/CLOCK** button once, the **LED Display** (4) will show 00:00.
2. Rotate the **CONFIRM** control to set the desired time (up to 95 minutes).
3. Press the **CONFIRM** control to start the count down, 5 beeps will sound at the end.

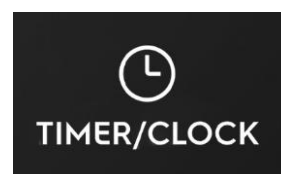

Lock Function

1. Press and hold the **STOP** button for 3 seconds to lock the control panel, the **Lock Indicator** (15) will illuminate, and all buttons will be disabled.
2. To cancel the lock function, press and hold **STOP** button for 3 seconds.

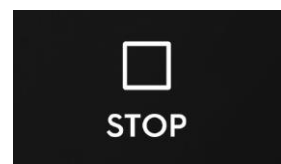

Microwave Cooking

1. Place the food onto a suitable microwaveable plate or container and place it onto the **Turntable** (8).
2. In standby mode, press the **MICROWAVE** button, the display will show "P100".
3. Press the **MICROWAVE** button repeatedly or rotate the **CONFIRM** control to set the power level.
4. Press the **CONFIRM** control to confirm the power level.
5. Rotate the **CONFIRM** control to set the cooking time, up to 95 minutes.
6. Press the **CONFIRM** control to start microwave cooking.
7. Once cooking is complete, 5 beeps will sound.



Level	Power	Display
0	0%	P0
1	10%	P10
2	20%	P20
3	30%	P30
4	40%	P40
5	50%	P50
6	60%	P60
7	70%	P70
8	80%	P80
9	90%	P90
10	100%	P100

WARNING! Metal or Metallic containers shall never be used during Microwave cooking.

Express Microwave Cooking

Use this feature to cook food at 100% microwave power immediately.

1. Open the door and place the food to be cooked onto the **Turntable** (8).
2. In standby mode, press the **CONFIRM** control repeatedly to set the cooking time (each press sets 30 seconds cooking time up to 95 minutes).




WARNING! Metal or Metallic containers shall never be used during Microwave cooking.

Auto Menu (A..)

This Microwave has nine pre-set cooking programs; the following table shows details of the pre-set programs:

1. In standby mode, press the **AUTO MENU** button.

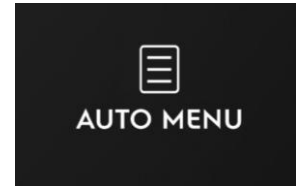

2. Rotate the **CONFIRM** control clockwise to select one of the pre-set programs from the table below.

3. Press the **CONFIRM** control to select the chosen pre-set.

4. Rotate the **CONFIRM** control to select the weight or portion.

5. Press the **CONFIRM** control to start cooking.



Auto Menu (A..)

Auto Menu	Weight	Display	Power	Time	Mode/Accessories
A01 Auto Reheat	150g	150g	P100	1:30	Microwave/Glass Turntable
	250g	250g		2:30	
	350g	350g		3:30	
	450g	450g		4:30	
	600g	600g		6:00	
A02 Potato	1 (about 230g)	1	P100	5:20	Microwave/Glass Turntable
	2 (about 460g)	2		8:30	
	3 (about 690g)	3		11:30	
A03 Meat	150g	150g	P80	3:00	Microwave/Glass Turntable
	300g	300g		4:40	
	450g	450g		6:30	
	600g	600g		8:30	
A04 Vegetable	150g	150g	P100	3:00	Microwave/Glass Turntable
	350g	350g		4:30	
	500g	500g		6:00	
A05 Pasta	50g (with 450g cold water)	50g	P80	18:00	Microwave/Glass Turntable
	100g (with 800g cold water)	100g		20:00	
	150g (with 1200g cold water)	150g		22:00	
A06 Fish	150g	150g	P80	3:10	Microwave/Glass Turntable
	250g	250g		4:40	
	350g	350g		5:40	
	450g	450g		7:00	
	650g	650g		9:40	
A07 Soup	200ml	200g	P100	2:10	Microwave/Glass Turntable
	400ml	400g		4:00	
	600ml	600g		5:40	
A08 Pizza	200g	200g	Air Fry 180°C	8:00	Baking Tray/Grill Basket
	300g	300g		9:00	
	400g	400g		11:00	
A09 Chicken	500g	500g	Air Fry 200°C	40:00	Baking Tray/Grill Basket
	750g	750g		45:00	
	1000g	1000g		50:00	
	1200g	1200g		55:00	
A10 Popcorn	50g	50g	P100	1:30	Microwave/Glass Turntable
	100g	100g		2:30	

Auto Menu (A..)

Notes About Auto Menu


The results of Microwave auto cooking depend on factors such as the shape and size of the food. If the result is not quite satisfactory, adjust the cooking time accordingly.

For **Auto Menu A02 Potato**, the **LED Display (4)** will not show weight but number of servings (1 - 3).

WARNING! Metal or Metallic containers shall never be used during Microwave cooking.

Air Fryer Presets (AF.)

1. Press the **Air Fry** presets button once, the display will show **AF01**.
2. Press the **Air Fry** presets button repeatedly or rotate the **CONFIRM** control to select a preset program as shown below.
3. Press the **CONFIRM** control to start cooking with the air fryer.

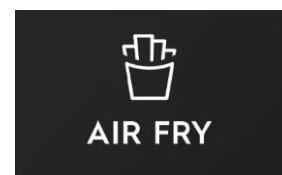

Air Fry Menu	Display	Weight	Cooking Time	Temperature	Accessories
Frozen French Fries	AF01	450g	17:00	220°C	Baking Tray/Grill Basket
Frozen Croquettes	AF02	400g	8:30	210°C	Baking Tray/Grill Basket
Frozen Onion Rings	AF03	350g	12:00	210°C	Baking Tray/Grill Basket
Frozen Nuggets	AF04	500g	18:00	210°C	Baking Tray/Grill Basket
Escalope	AF05	450g	20:00	200°C	Baking Tray/Grill Basket
Shrimps	AF06	200g	11:00	210°C	Baking Tray/Grill Basket
Vegetables	AF07	300g	9:00	220°C	Baking Tray/Grill Basket
Spring Rolls	AF08	400g	14:00	210°C	Baking Tray/Grill Basket
Frozen Potato Wedges	AF09	400g	17:00	220°C	Baking Tray/Grill Basket
Buffalo Chicken Wings	AF10	550g	15:00	210°C	Baking Tray/Grill Basket

- The result of cooking presets depends on factors such as the shape and size of food. If you find the result at any rate not quite satisfactory, please adjust the cooking time a little bit accordingly.

NB The **Air fryer Power Level** (17) display will show the set temperature with one light and the actual temperature will be gradually shown by a solid row of lights.


WARNING Plastic containers shall never be used during Air Fry cooking.

NB During Menus AF03, AF04, AF05 & AF08, the buzzer will sound to remind you to turn the food over during cooking. The oven will carry on cooking otherwise.

Combination Cooking – Microwave & Air Fryer


You can combine microwave and air fry cooking, to cook quickly and brown at the same time. Always use microwave-safe and Oven-proof cookware. Glass or ceramic dishes are ideal as they allow the microwaves to penetrate the food evenly.

1. Press the **COMBI/CONV** button once, the display will show **C-1**.
2. Rotate the **CONFIRM** control to set the cooking time, time can be set up to 95 minutes.
3. Press the **CONFIRM** control to start cooking.

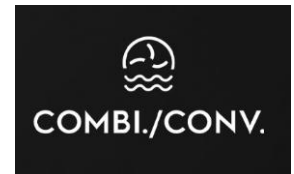


Convection Cooking with Preheat

1. Press the **COMBI/CONV** button twice, the display will show 140°C.
2. Rotate the **CONFIRM** control to set the temperature, select from 140, 150, 160, 170, 180, 190, 200, 210, 220 or 230°C.
3. Press the **CONFIRM** control to confirm the temperature.
4. Press the **CONFIRM** control again to start preheating.
5. Once preheating is completed, the oven will beep twice, open the door and place your food onto the **Turntable** (8) and close the door.
6. Rotate the **CONFIRM** control to set the cooking time, up to 95 minutes.
7. Press the **CONFIRM** control to start cooking.

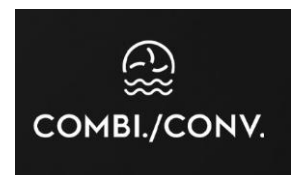

Convection Cooking without Preheat

1. Press the **COMBI/CONV** button twice, the display will show 140°C.
2. Rotate the **CONFIRM** control to set the temperature, select from 140, 150, 160, 170, 180, 190, 200, 210, 220 or 230°C.
3. Press the **CONFIRM** control to confirm the temperature.
4. Rotate the **CONFIRM** control to set the cooking time, up to 95 minutes.
5. Press the **CONFIRM** control to start cooking.

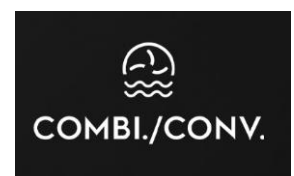


For the utensils that are suitable for use in **COMBI/CONV** mode, please refer to **Cooking Utensils Guidelines** section.

Defrosting

The microwave can defrost by weight or by time.


Defrost by Weight

1. Press the **DEFROST** button once, the display will show **dEF1**.
2. Rotate the **CONFIRM** control to set the weight between 100 and 2000g.
3. Press the **CONFIRM** control to start defrosting.

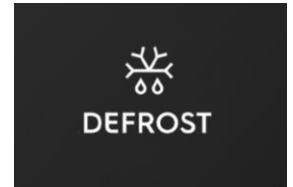

Defrost by Time

1. Press the **DEFROST** button twice, the display will show **dEF2**.
2. Rotate the **CONFIRM** control to set the desired defrost time, up to 95 minutes.
3. Press the **CONFIRM** control to start defrosting.

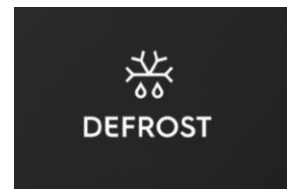

WARNING! Metal or Metallic containers shall never be used during Microwave cooking.

During defrosting, the microwave will sound twice to remind you to turn food over. Open the door, turn the food over and close the door to continue defrosting.

Defrosting Tips

Microwaves penetrate approximately 4cm into most foods, to maximise defrosting the following is advised:

- For thick and chunky foods, turn the food regularly during defrosting to obtain uniform thawing.
- If the food is over 2kg, it is advised to turn it over a minimum of twice.
- **DO NOT** refreeze food once defrosted.
- Ensure that food is thoroughly defrosted before cooking.

Keep Warm

1. Press the **KEEP WARM** button once, the display will show **65°C**.
2. Rotate the **CONFIRM** control to set the time.
3. Press the **CONFIRM** control to start cooking.



NB The temperature cannot be changed in **KEEP WARM** mode.

WARNING! Metal or Metallic containers shall never be used during Microwave cooking.



WARNING! Plastic containers shall never be used during Air Fry cooking.

Multi-Stage Cooking

- Two cooking stages can be set in Multi-Stage Cooking.
- If the defrost function is used, it will work automatically in the first stage.
- The Timer, Convection Cooking with Preheat, Auto Menu and Keep Warm cannot be set as one multistage.

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes:

1. Press the **DEFROST** button twice, the display will show **dEF2**.
2. Rotate the **CONFIRM** control to set the desired defrost time of 5 minutes.
3. Press **MICROWAVE** and the display will show **P100**.
4. Press **MICROWAVE** repeatedly or rotate the **CONFIRM** control to set the power level to **P80**.
5. Press the **CONFIRM** control to confirm the power level.
6. Rotate the **CONFIRM** control to set the cooking time to 7 minutes.
7. Press the **CONFIRM** control to start cooking.

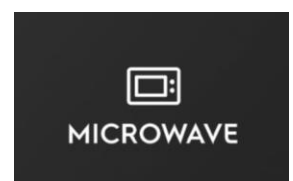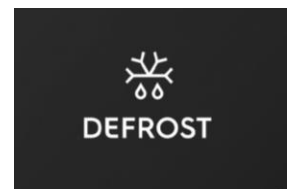

Cooling

After cooking, if the oven temperature is above 140°C the internal cooling fan will continue to run and the display will show "COOL". Once the oven temperature drops below 140°C or STOP is pressed the oven will return to standby mode.

Cooking Tips

- Place thicker pieces towards outside of food container, the thinner pieces towards the centre and spread evenly. Do not overlap if possible.
- Start cooking with a shorter time setting, evaluate it after the time finishes and extend the cooking time if needed. Over cooking can result in smoke and burnt food.
- Food such as chicken, burgers or steak should be turned once during cooking.
- Depending on the food type, if applicable stir from the outside inwards to the centre of the dish once or twice during cooking.
- Make sure meat is cooked thoroughly there should be no signs of pink in the meat or in the meat juices.

Cooking Utensils Guidelines

- Only use utensils that are suitable for use in the appliance.
- Metallic containers shall never be used during Microwave cooking.
- Plastic containers shall never be used during Air Fry cooking.
- **DO NOT** use recycled paper products when microwave cooking, as they may contain small metal fragments which may cause sparks and/or fires.
- Round/oval dishes rather than square/oblong ones are recommended, as food in corners tends to overcook.

Material	Microwave/ Defrost	Air Fry/Bake/ Keep Warm	Combination*
Heat-Resistant Glass	Yes	Yes	Yes
Heat-Resistant Plastic	Yes	No	No
Heat-Resistant Ceramics	Yes	Yes	Yes
Plastic film	Yes	No	No
Metal containers	No	Yes	No
Grill rack	No	Yes	No
Bamboo, wood, paper	No	No	No

*Combination: applicable for "Microwave+Air Fry" cooking.

Technical Specification

Model Number	SDA2868
Rated Voltage	230-240V~ 50Hz
Rated Input (Microwave)	1300-1400W
Rated Output (Microwave)	850-900W
Rated Input (Air Fry)	1400-1500W
Microwave frequency	2450MHz
Protection Class	I (This Appliance Must Be Earthed)
ErP: Power consumption of equipment in standby mode shall not exceed 0.80W	0,61W
This equipment complies with Annex III of Commission Regulation (EU) 2023/826	

Troubleshooting

Problem	Possible Cause
Oven will not start	Plug not inserted into power socket, or socket is not switched on. Door is opened. Wrong mode is set.
Arcing or Sparking	Incorrect materials in microwave oven are used. The oven is operated when empty. Spilled food remains in the cavity.
Unevenly cooked food	Food is not defrosted completely. Power setting for cooking time is incorrect. Food is not turned or stirred.
Overcooked food	Power setting for cooking time is incorrect.
Undercooked food	Turntable not rotating due to food trapped in the roller rest and cavity bottom. Food is not defrosted completely. Oven ventilation ports are restricted. Power setting for cooking time is incorrect.
Incomplete defrosting	Power setting for cooking time is incorrect. Food is not turned or stirred.
Noise comes from the turntable	Food residue exists between the turntable roller rest and cavity bottom.
Oven light does not glow	The light bulb has burned out. Confirm control has not been pressed.
Oven light dim	In low power microwave cooking, the oven light may become dim. This is normal.
Microwave oven interfering with TV reception	Radio and TV reception maybe interfered with when microwave oven is operation. It is similar to the interference of small electrical appliances such as food mixers, vacuum cleaners and electric fans. This is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Mostly out of vents but some may condense on cool places such as the oven door. This is normal.
Oven started accidentally with no food in	Although starting the oven with no food in it should be avoided, it does no damage to the oven provided it is only operated empty for a very short time. It is advised that a glass or microwave safe container of water is always left in the oven to absorb any heat should the oven be turned on accidentally.

Cleaning & Maintenance

WARNING! Always disconnect the microwave from the mains power supply before cleaning.

- **DO NOT** immerse the appliance in water or any other liquids whilst cleaning.
- Wipe the exterior with clean, soft damp cloth and dry thoroughly.
- Using a clean, soft damp cloth, wipe clean the interior of the door and door seals, interior cavity to remove any spills or spatter and dry thoroughly.
- Do not remove the waveguide cover. Wipe to clean the wave guide cover making sure it is free from food residue, this is located on the cavity wall on the right-hand side.
- Wash the turntable, the turntable ring support in warm soapy water and dry thoroughly.

NB The door must be fully closed for the Microwave to operate. The door operates a safety interlock mechanism which prevents the unit from operating whilst the door is open.

WARNING! The Waveguide Cover (3) should never be removed.

Some foods, for example fish can leave an odour which may linger, to refresh the cavity follow one of the 3 methods below:

Method 1 - Distilled Vinegar

1. Add 1 cup of water and 1/2 cup of distilled vinegar to a microwave proof bowl or plastic container and place in the centre of the oven.
2. Heat on high for 2 minutes 30 seconds or until the solution boils or gives off steam.
3. Leave to cool for 15 minutes before opening the door.
4. Open the door, remove the turntable, then wipe the microwave with a clean damp cloth.
5. Wipe the turntable before replacing.

Method 2 - Lemon

1. Cut a lemon in two and squeeze the lemon into a microwave proof bowl or plastic container, add 1 cup of water and place in the centre of the oven.
2. Heat on high for 2 minutes 30 seconds or until the solution boils or gives off steam.
3. Leave to cool for 15 minutes before opening the door.
4. Open the door, remove the turntable, then wipe the microwave with a clean, damp cloth.
5. Wipe the turntable before replacing.

Cleaning & Maintenance

Method 3 - Bicarbonate of soda

1. Add 1 cup of water and 2 tbsp bicarbonate soda to a microwave proof bowl or plastic container and place in the centre of the oven.
2. Heat on high for 2 minutes 30 seconds or until the solution boils or gives off steam.
3. Leave to cool for 15 minutes before opening the door.
4. Open the door, remove the turntable, then wipe the microwave with a clean, damp cloth.
5. Wipe the turntable before replacing.

Servicing

Servicing and repairs should only be carried out by qualified service personnel.

WARNING!

Some components still retain a high voltage charge even when the microwave oven is disconnected from the mains supply, never remove Covers or Guards.

Covers and Guards should only be removed by qualified personnel.

If any part of the oven or cord becomes damaged stop using it immediately and seek advice from qualified service personnel.

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email:

help@electroluxsmalldomesticappliance.co.uk

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Electrolux parts or accessories be used with this appliance.

Mains Plug Information

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Recycling Information

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.


Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product




You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.

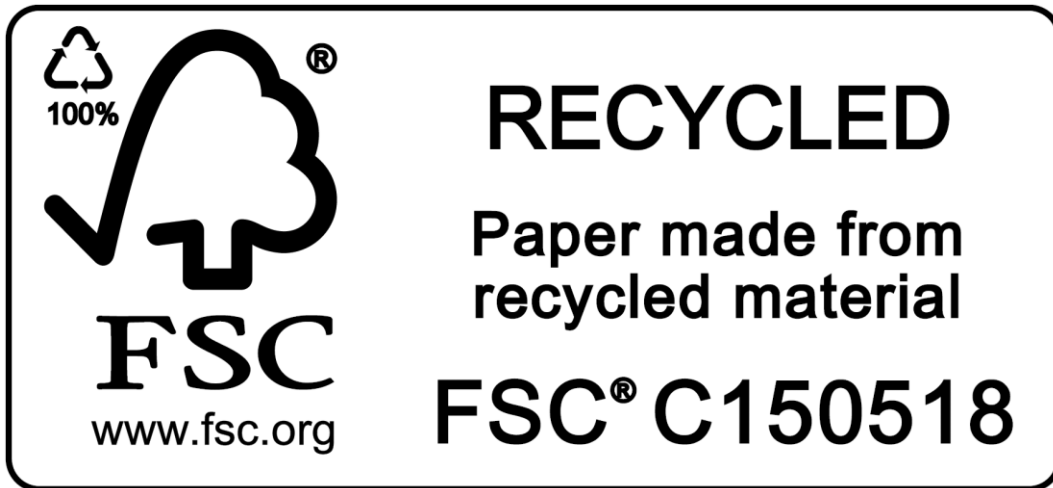

**UK
CA**

CE



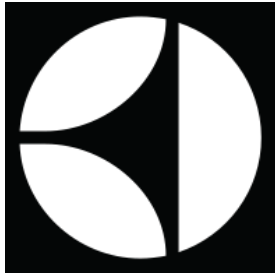

Electrolux

WARRANTY

**Thank you for purchasing your Electrolux Product.
As part of our commitment to quality, we are offering you an extra 4 years warranty in addition to your 1 year guarantee**

Your Electrolux product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 4 year warranty*please register your purchase online within 28 days of the original purchase date by registering at:

help@electroluxsmalldomesticappliance.co.uk

or

Contact Us: www.electroluxsmalldomesticappliance.co.uk

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Produced and imported under licence by

Eurosonic Group Limited

Brightgate House

1 Brightgate Way

Manchester M32 0TB UK

EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006

www.esgltd.com

ELECTROLUX is a pending or registered trademark used under license from AB Electrolux (publ)

Made in China