




# Electrolux

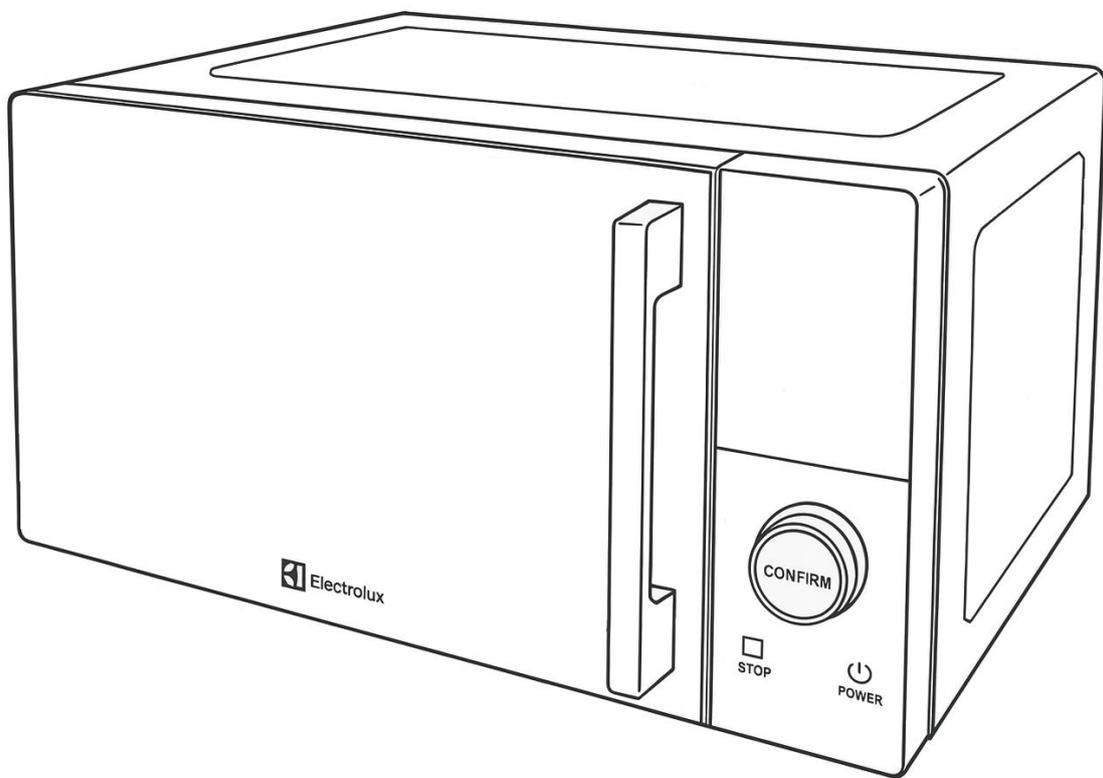

25L Combination Microwave  
SDA2876

User Manual

## Page No.

2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
7	Installation
8	Explanation of Symbols
8	Before First Use of Your Combination Microwave
9	Description of Parts
10	Description of the Digital Display
10	Menu Selection Panel
10	Selection Dial Panel
11	Setting the Clock
12	Using Your Microwave Oven
13	Defrosting
14	Auto Cooking
15	Countdown Timer
16	Reheating
17	Using the Grill
18	Combination Cooking (Grill & Microwave)
19	Keep Warm Function
19	Muting Your Microwave
19	Eco (Turning off the Display)
20	Child Lock
20	Cleaning
21	Servicing
21	Technical Specification
21	Recycling Information
22	Non-Rewireable Mains Plug
22	Customer Support
23	Troubleshooting
23	FSC and Safety Marks
	Back Cover - Warranty Information

**Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.**

**Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.**

## **IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE**

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using this Microwave Oven.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

## Important Safety Instructions for Proper Use

- Keep the appliance and its cord out of reach of children less than 8 years.
- **DO NOT** touch hot surfaces. The outer surfaces are liable to get hot during use. Always use the handles and knobs. 
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- **DO NOT** use this Microwave Oven with a programmer, timer, separate remote-control system or any other device that switches the appliance on automatically.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by suitable qualified personnel in order to avoid a hazard.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.

## Important Safety Instructions for Proper Use

- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
  - **DO NOT** use this appliance for anything other than its intended use.
  - **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
  - Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
  - Unplug after each use. Grasp the plug, not the cord.
  - **CAUTION** Do not overcook food.
  - Metallic containers for food and beverages are not allowed during microwave cooking.
  - When heating food in plastic containers or paper containers, keep an eye on the oven due to the possibility of ignition.
  - The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
  - This appliance shall not be cleaned with a steam cleaner.
  - The microwave oven is intended to be used free-standing.
  - **DO NOT** place this microwave into a cabinet.
  - **CAUTION** Remove wire twists from paper and plastic bags before placing in the oven.
  - **DO NOT** heat oil or fat for deep frying in the oven as the temperature of the fat can't be controlled.
  - After use wipe the waveguide cover with a damp cloth, followed by a dry cloth to remove any food splashes and grease. Built up grease may overheat and smoke or ignite.
  - If materials inside the oven smoke or ignite, keep the door closed, turn oven off and disconnect the power supply in order to stifle any flames.
- ⚠ WARNING!** Liquids and other foods must not be heated in sealed containers since they are liable to explode; Baby bottles fitted with a screw cap or teat are considered sealed containers.

## Important Safety Instructions for Proper Use


- Liquids should be heated in a wide mouthed container and left for a short period after the heating cycle to avoid possible hazards such as delayed eruptive boiling of the liquid. Therefore, care must be taken when handling the container.
- Potatoes, sausage and other skinned foods should be pierced before heating.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- Only use utensils suitable for use in a microwave oven.
- **DO NOT** store food or other items in the oven.
- **DO NOT** operate the oven without any food or liquid inside, this may damage the oven.

**⚠ WARNING!** If the door or door seals are damaged or if the oven has malfunctioned, the oven must not be operated until it has been repaired by a competent person. It is hazardous for anybody other than a suitably qualified person to carry out any service or repair that involves the removal of a cover which gives protection against exposure to microwave energy.

- This microwave oven is intended for the heating of food and beverages. The drying of clothes, heating of warming pads slippers, sponges and cloths may lead to risk of injury, ignition and fire.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.


## Installation

- Select a level surface no less than 85cm (33 inches) from the floor, that provides enough space for the outlet vents.
- A minimum clearance of 5cm (2 inches) is required between the oven and any adjacent wall, with a minimum clearance of 10cm (4 inches) between the rear of the microwave and the wall.
- Leave a minimum clearance of 20cm (8 inches) above the oven

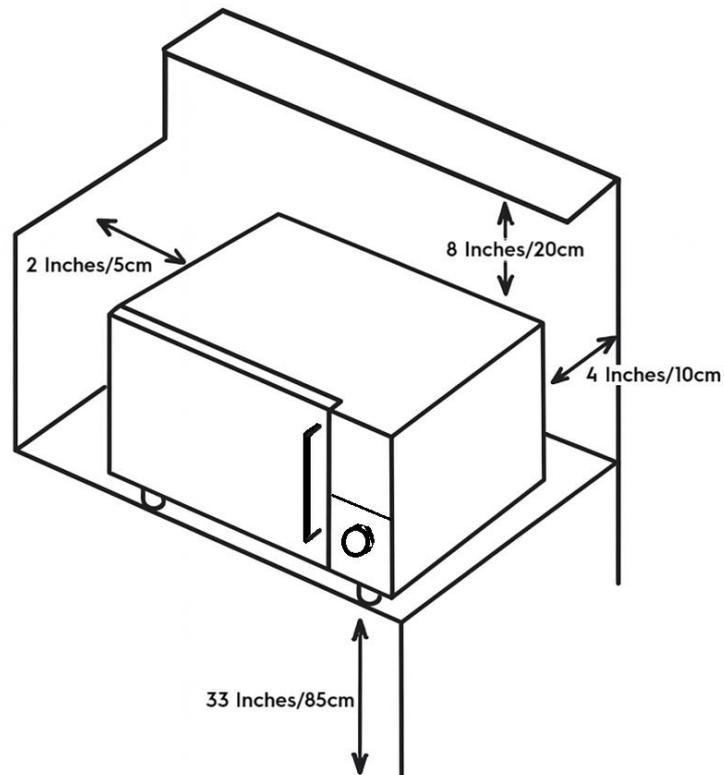

## Explanation of Symbols


The following warning symbols or words are used in this instruction manual:

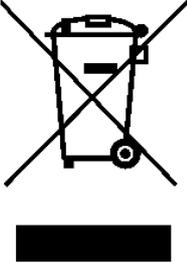	<p>Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.</p>
	<p>Products labelled with this symbol conform to applicable provisions of the European Economic Area.</p>
	<p>You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit <a href="http://www.recycle-more.co.uk">www.recycle-more.co.uk</a> or <a href="http://www.weeeireland.ie">www.weeeireland.ie</a> enter your postcode to find out your nearest recycling site.</p>
	<p>This symbol provides useful additional information on the use of this product.</p>
	<p>This symbol indicates that the supply uses an alternating current mains supply.</p>
	<p>This designates a hazard with moderate risk, which may result in severe injury if not adhered to.</p>
	<p>This symbol indicates that the surface gets hot and care must be taken.</p>


## Before First Use of Your Combination Microwave

Remove all packing materials and discard responsibly.

Before using the Microwave for the first time, wash all the attachments in warm soapy water and dry thoroughly afterwards. Do not immerse the Microwave in water or any other liquids.

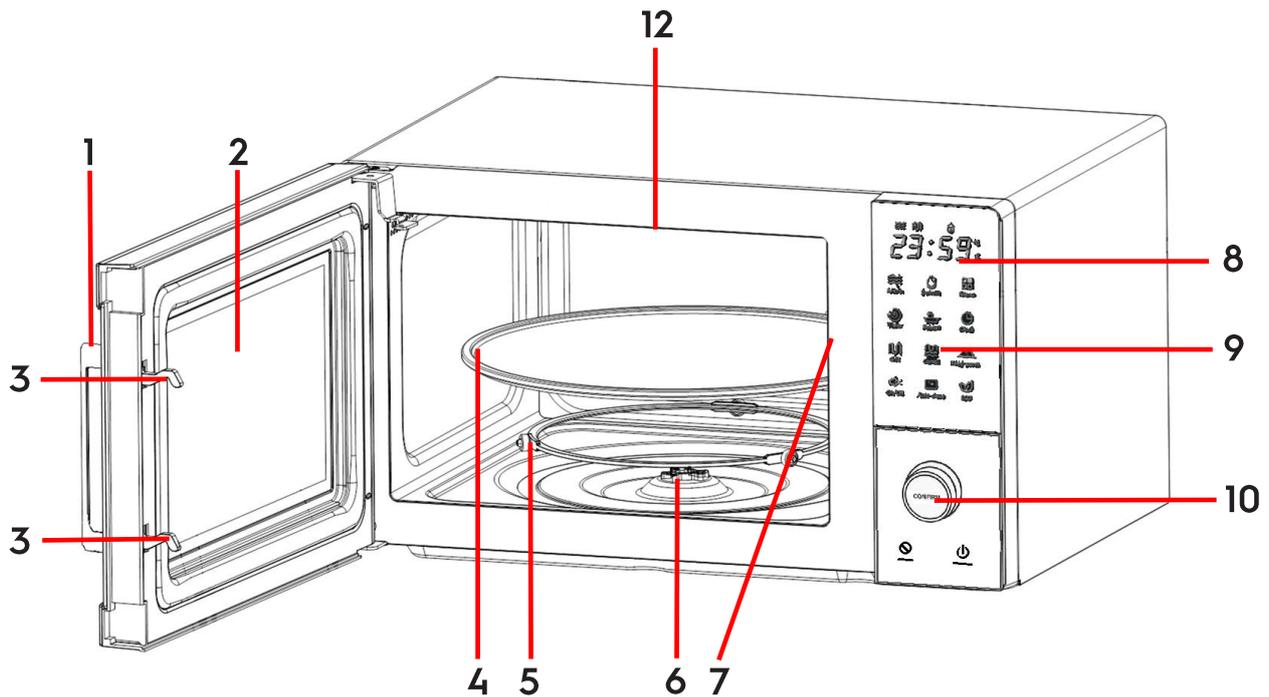


1. Handle
2. Door Viewing Window
3. Door Catches/Lock
4. Glass Turntable
5. Turntable Ring
6. Motor Spindle
7. Waveguide Cover (internal)
8. Digital Display
9. Menu
10. Selection Dial
11. Grill Rack
12. Grill (internal)

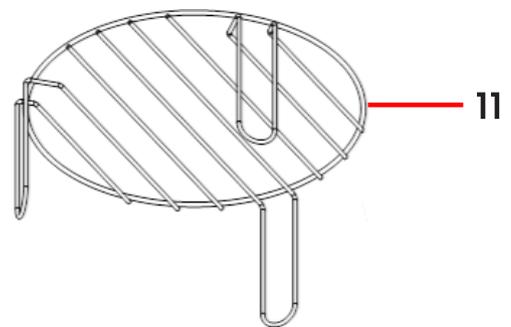

- i** The door must be fully closed in order for the Microwave to operate. The door operates a safety interlock mechanism which prevents the unit from operating whilst the door is open.
- i** Place the turntable ring in first, fit the turntable onto the rotating turntable support and make sure it is geared in properly.
- i** Make sure the turntable support is correctly located


**⚠ WARNING! The waveguide cover (7) should never be removed.**

### Description of the Digital Display (8)

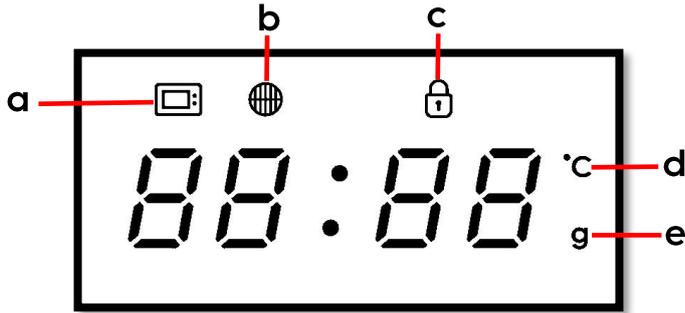


- a. Microwave Indicator
- b. Grill Indicator
- c. Child Lock Icon
- d. Celsius Indicator
- e. Weight indicator (grams)

### Menu Selection (9) Panel

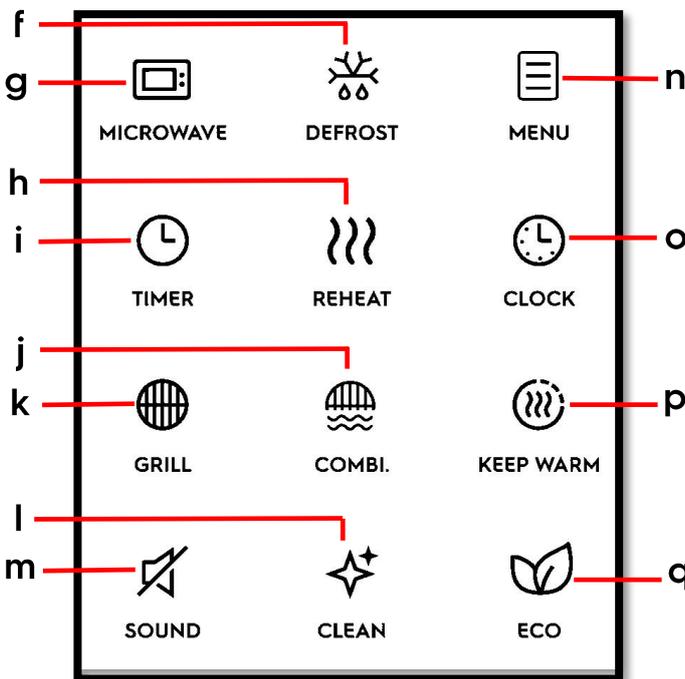


- f. Defrosting
- g. Microwaving
- h. Reheating Food
- i. Timer
- j. Grill And Microwave
- k. Grilling
- l. Cleaning
- m. Mute the Sound
- n. Auto Menu
- o. Setting the Clock
- p. Keep Warm Function
- q. Eco Display

### Selection Dial (10) Panel

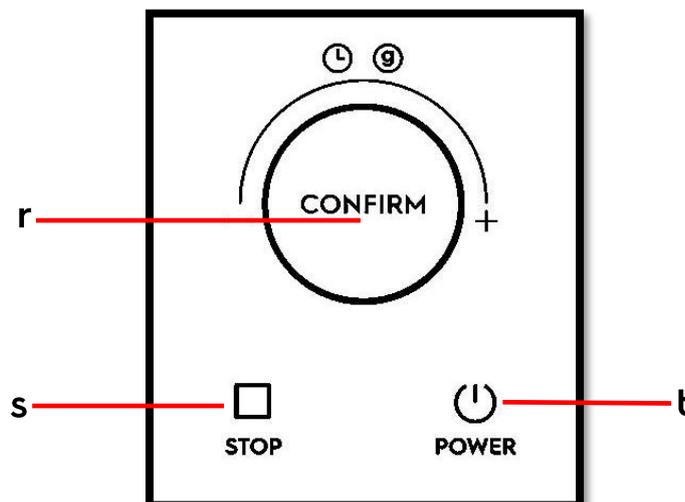


- r. Confirm Button
- s. Stop Button
- t. Power Button



## Setting The Clock

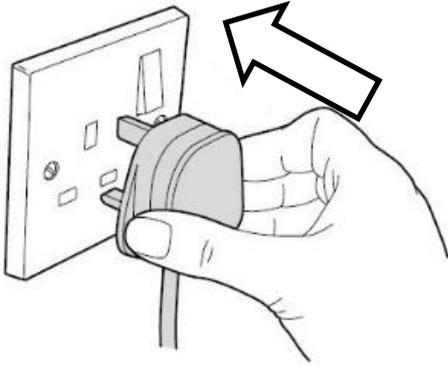


1. Insert the mains plug into the nearest socket and switch the socket on (if applicable). The Microwave will beep and the digital display will show 0:00.

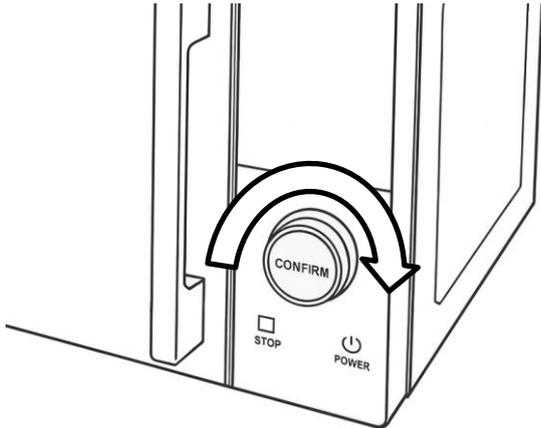

2. Rotate the **Selection Dial** (10) clockwise until the **Setting the Clock** (o) icon flashes on the **Menu** (9), see below.

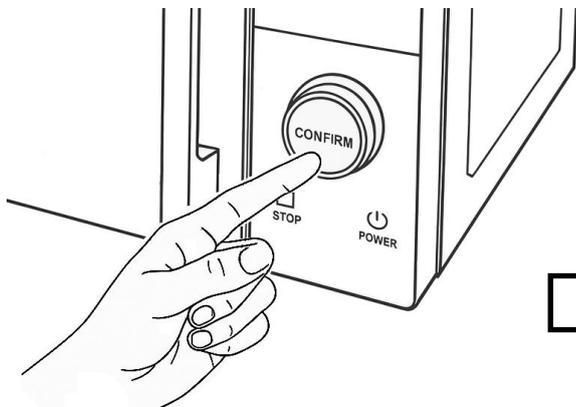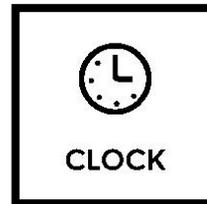


3. Press the **Confirm Button** (r) in the centre of the **Selection Dial** (10). The hours will flash on the **Digital Display** (8).

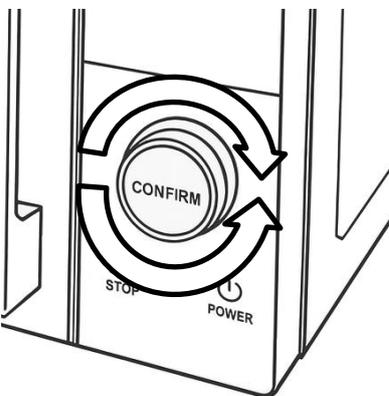

4. Rotate the **Selection Dial** (10) to change the hours. Once you have selected the correct hours (24 hour clock), press the **Confirm Button** (r) again. The minutes will now flash, to change the minutes, rotate the **Selection Dial** (10) again. Once you have selected the correct minutes, press the **Confirm Button** (r) and the clock is set. The **Setting the Clock** (o) icon will turn off.

## Using Your Microwave Oven


1. Place the Microwave Oven on a solid level, heat resistant surface, ensure that the ventilation outlets are not obstructed.
2. Before first use, open the door by pulling the **Handle** (1), ensuring the Microwave cannot slide forwards.
3. Place the **Turntable Ring** (5) in the base of the oven as shown in the diagram.

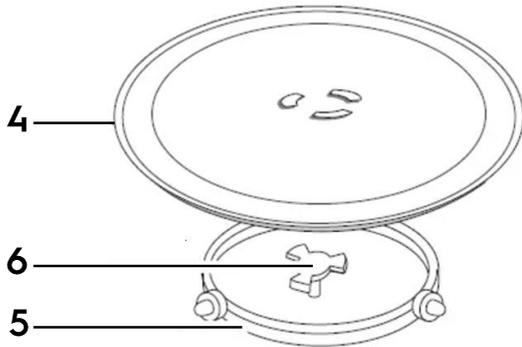


4. Place the **Glass Turntable** (4) onto the **Motor Spindle** (6). Rotate the **Glass Turntable** (4) a little until the notches drop onto the **Motor Spindle** (6).
5. Insert the mains plug into the nearest socket.
6. Place the food to be cooked (in a suitable **non-metallic** container) onto the **Glass Turntable** (4).
7. Push the Door closed.
8. Rotate the **Selection Dial** (10) clockwise until the **Microwaving** (g) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r)

9. The **Digital Display** (8) will now show 100P. using the **Selection Dial** (10) rotate the dial to select the programme you wish to use.

Power Level as Displayed	Power %	Power level
100P	100%	High
80P	80%	Medium High
50P	50%	Medium
30P	30%	Medium Low
10P	10%	Low

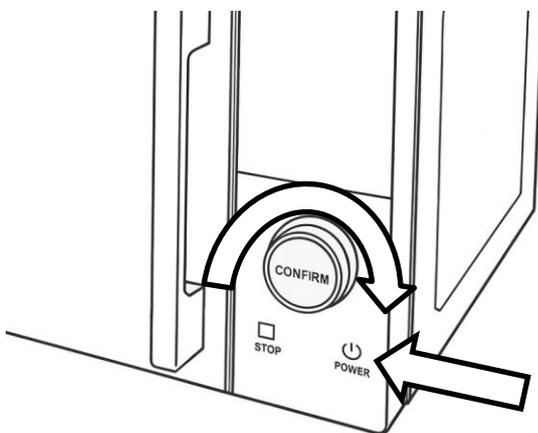

10. Once you have made your selection, press the **Confirm Button** (r). The digital display will show 0:10 (10 seconds). To Increase the time, rotate the **Selection Dial** (10) clockwise. The time can be increased up to 60:00 (60 minutes).
11. Once you have made your selection, press the **Power Button** (t) to begin cooking.

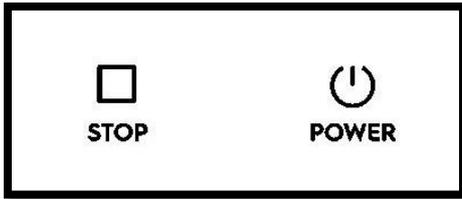

12. If you wish to pause cooking to stir, rotate, or check on your food, single press the **Stop Button** (s) or open the door by pulling the **Handle** (1). You can resume cooking by closing the door and press the **Power Button** (t) again.

13. To Cancel the cooking programme. Press the **Stop Button** (s) when the programme is paused and this will clear the current programme.

14. During cooking, if required you can add 30 seconds by pressing the **Power Button** (t). For each subsequent press a further 30 seconds will be added to the remaining time.


## Defrosting



1. Rotate the **Selection Dial** (10) clockwise until the **Defrosting** (f) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r).

2. The **Digital Display** (8) will now show dEF1, rotate the **Selection Dial** (10) to choose between dEF1 & dEF2.

Defrost Setting	Unit of Measure	Range of Measure
dEF1	Weight in Grams	100g to 1500g (in 100g increments)
dEF2	Time in Minutes/Seconds	0:10 to 60:00 (in 10 second increments up to 5 minutes, 30 seconds up 10 minutes and 1 minute increments up to 60 minutes)

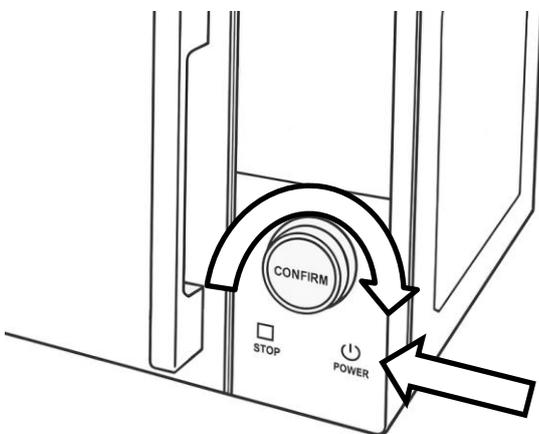


3. Once you have made your selection, press the **Confirm Button** (r). The **Digital Display** (8) will show 100 if dEF1 is selected and the **Weight Indicator** (e) will be illuminated.

If dEF2 is selected, the **Digital Display** (8) will show 0:10 (10 seconds).

4. To Increase the time or weight, rotate the **Selection Dial** (10) clockwise.

5. Once you have made your selection, press the **Power Button** (t) to begin cooking.

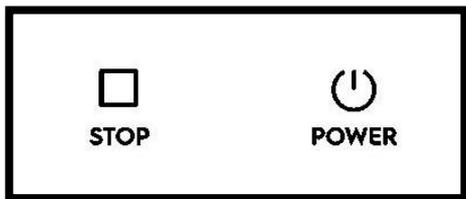

6. If you wish to pause cooking to stir, rotate, or check on your food, single press the **Stop Button** (s) or open the door by pulling the **Handle** (l). You can resume cooking by closing the door and press the **Power Button** (t) again.
7. To Cancel the cooking programme. Press the **Stop Button** (s) when the programme is paused and this will clear the current programme.
8. During cooking, if required you can add 30 seconds by pressing the **Power Button** (t). For each subsequent press a further 30 seconds will be added to the remaining time.


## Auto Cooking




1. Rotate the **Selection Dial** (10) clockwise until the **Auto Menu** (n) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r).
2. The **Digital Display** (8) will now show A.1, rotate the **Selection Dial** (10) to choose between A1 to A8.

Menu Display	Food Type	Weight/Quantity
A.1	Potato	250g, 500g or 750g
A.2	Pasta	50g, 100g or 150g
A.3	Pizza	200g or 400g
A.4	Popcorn	100g
A.5	Vegetables	200g, 400g or 600g
A.6	Beverage	1 cup, 2 cups or 3 cups (1 cup is approx. 250ml)
A.7	Meat	200g, 400g or 600g
A.8	Fish	200g, 400g or 600g

3. Once you have made your selection, press the **Confirm Button** (8). The **Digital Display** (8) will show 100 if your selection is by weight and the **Weight Indicator** (e) will be illuminated.

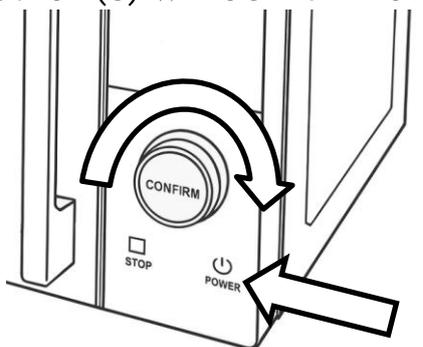

4. If A.6 is selected, the **Digital Display** (8) will show 1 (1 cup).
5. To Increase the quantity or weight, rotate the **Selection Dial** (10) clockwise.
6. Once you have made your selection, press the **Power Button** (t) to begin cooking.

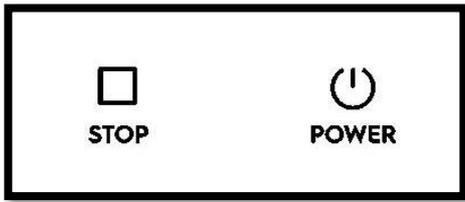

7. If you wish to pause cooking to stir, rotate, or check on your food, single press the **Stop Button** (s) or open the door by pulling the **Handle** (1). You can resume cooking by closing the door and press the **Power Button** (t) again.

8. To Cancel the cooking programme. Press the **Stop Button** (s) when the programme is paused and this will clear the current programme.



9. During cooking, if required you can add 30 seconds by pressing the **Power Button** (t). For each subsequent press a further 30 seconds will be added to the remaining time.

**i** The preset cooking times are based on your food being at room temperature 20°C-25°C. Higher or lower temperatures will affect the cooking time.

**i** The Shape and size of your food may also affect the required cooking times, always check your food thoroughly before eating to ensure it is fully cooked.

## Countdown Timer

This function allows you to set a countdown timer.

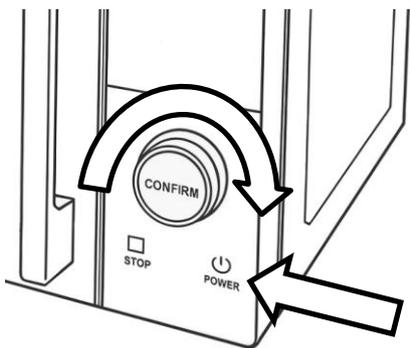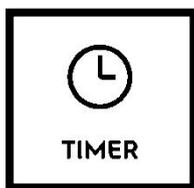

1. Rotate the **Selection Dial** (10) clockwise until the **Timer** (i) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r).


2. The **Digital Display** (8) will now show 0:00, rotate the **Selection Dial** (10) to choose between 10 seconds (0:10) and 60 Minutes (60:00).

3. Once you have made your selection, press the **Power Button** (t).

4. The **Digital Display** (8) will begin counting down to 0. If the Microwave is not Muted (see the section “**Muting Your Microwave**”) a long audible warning beep will sound when the time expires.

## Reheating

This function is used to heat food by weight.

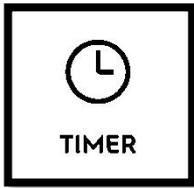


1. Rotate the **Selection Dial** (10) clockwise until the **Reheating Food** (h) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r).
2. The **Digital Display** (8) will now show 200, and the **Weight indicator** (e) will be illuminated.

3. Rotate the **Selection Dial** (10) to choose between 200g and 1000g (in 200g increments).

Weight as displayed	Cooking Time (in minutes and seconds)
200g	2:20
400g	4:00
600g	5:40
800g	7:40
1000g	8:40

4. Once you have selected the required cooking weight press the **Power Button** (t) to begin cooking.

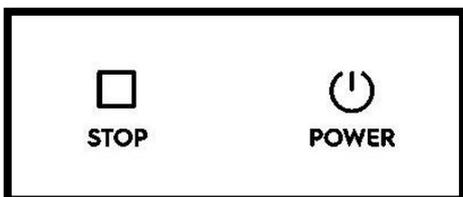



5. If you wish to pause cooking to stir, rotate, or check on your food, single press the **Stop Button** (s) or open the door by pulling the **Handle** (l). You can resume cooking by closing the door and press the **Power Button** (t) again.

6. To Cancel the cooking programme. Press the **Stop Button** (s) when the programme is paused and this will clear the current programme.
7. During cooking, if required you can add 30 seconds by pressing the **Power Button** (t). For each subsequent press a further 30 seconds will be added to the remaining time.

**i** The Shape and size of your food may also affect the required cooking times, always check your food thoroughly before eating to ensure it is fully cooked.

## Using the Grill

1. Place the Grill rack in the centre of your microwave oven (if required). Now place your food directly onto the rack and close the door.

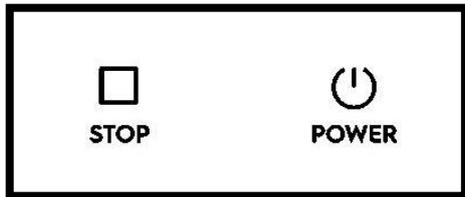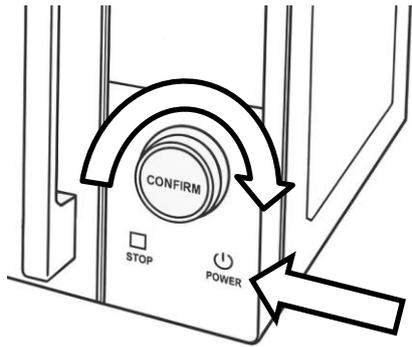

2. Rotate the **Selection Dial** (10) clockwise until the **Grill** (k) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r). The **Grill indicator** (b) will be illuminated.

3. The **Digital Display** (8) will now show 0:10, rotate the **Selection Dial** (10) to choose between 10 seconds and 60 minutes.
4. Once you have made your selection, press the **Power Button** (t).

5. If you wish to pause cooking to rotate or check on your food, single press the **Stop Button** (s) or open the door by pulling the **Handle** (i). You can resume cooking by closing the door and press the **Power Button** (t) again.

6. To Cancel the cooking programme. Press the **Stop Button** (s) when the programme is paused and this will clear the current programme.
7. During cooking, if required you can add 30 seconds by pressing the **Power Button** (t). For each subsequent press a further 30 seconds will be added to the remaining time.

**⚠ WARNING!** The inside of your microwave, the grill rack, any cooking containers and top of your microwave will get very hot. Always use protective gloves or a tea towel when removing food from your microwave to PREVENT BURNS.



## Combination Cooking (Grill & Microwave)

1. The Combination Cooking function is used to Microwave and Grill food at the same time.
2. Place the Grill rack in the centre of your microwave oven (if required). Now place your food directly onto the rack and close the door.



3. Rotate the **Selection Dial** (10) clockwise until the **Grill and Microwave** (j) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r). The **Microwave Indicator** (a) and **Grill indicator** (b) will be illuminated.
4. The **Digital Display** (8) will show C-1, rotate the **Selection Dial** (10) to choose between C-1 and C-2.

Combi Selection	Power Rating
C-1	Grill 70%, Microwaving 30%
C-2	Grill 45%, Microwaving 55%

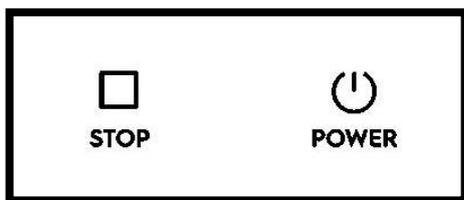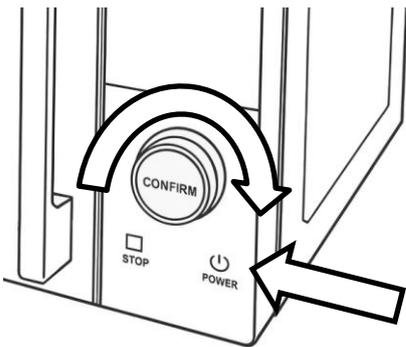

5. Once you have made your selection, press the **Confirm Button** (8). The **Digital Display** (8) will show 0:10. To Increase the time, rotate the **Selection Dial** (10) clockwise. The time can be increased up to 60:00 (60 minutes).
6. Once you have made your selection, press the **Power Button** (t) to begin cooking.
7. If you wish to pause cooking to stir, rotate, or check on your food, single press the **Stop Button** (s) or open the door by pulling the **Handle** (l). You can

resume cooking by closing the door and press the **Power Button** (t) again.

8. To Cancel the cooking programme. Press the **Stop Button** (s) when the programme is paused and this will clear the current programme.
9. During cooking, if required you can add 30 seconds by pressing the **Power Button** (t). For each subsequent press a further 30 seconds will be added to the remaining time.

**⚠ WARNING!** The inside of your microwave, the grill rack, any cooking containers and top of your microwave will get very hot. Always use protective gloves or a tea towel when removing food from your microwave to PREVENT BURNS.

## Keep Warm

This function is used to keep your food warm.



rotate the **Selection Dial** (10) clockwise. The time can be increased up to 60:00 (60 minutes).

1. Rotate the **Selection Dial** (10) clockwise until the **Keep** (p) menu icon flashes on the **Menu** (9). Now press the **Confirm Button** (r).
2. The **Digital Display** (8) will now show 0:10 (10 Seconds). To Increase the time,

## Muting Your Microwave

This function is used to turn of the audible beep and programme end audible warning.



1. Rotate the **Selection Dial** (10) clockwise until the **Mute the Sound** (m) menu icon flashes on the **Menu** (9) and the **Digital display** (8) shows U-ON.
2. Now press the **Confirm Button** (r).
3. To switch the sound off, rotate the **Selection Dial** (10) to "U-OFF" and press the **Confirm Button** (r).
4. To switch the sound on, rotate the **Selection Dial** (10) to "U-ON" and press **Confirm Button** (r).

## Eco (Turning off the Display)



1. Rotate the **Selection Dial** (10) clockwise until the **Eco Display** (q) menu icon flashes on the **Menu** (9).
2. Now press the **Confirm Button** (r).

The **Digital Display** (8) and **Menu** (9) will turn off. To turn your microwave display back on, press any buttons or rotate the **Selection Dial** (10).

## Child Lock

This function allows you to lock the controls of your microwave when it is not in use.

To use the child lock function, press and hold the **Stop Button** (s) for approximately 5 second until the **Child Lock Icon** (c) appears on the Digital Display (8).

If the Microwave is not Muted (see the section “**Muting Your Microwave**”) a long audible warning beep will sound when the microwave is locked.

To unlock your microwave, repeat the above process.

## Cleaning

This function is used to assist in the cleaning of your microwave. Before you begin, please remove any food and wipe down the inside of your microwave.

1. Add 250ml of clean water into a microwavable cup or beaker (cold water).
2. Place the water in the centre of the microwave and close the door.



3. Rotate the **Selection Dial** (10) until the **Cleaning** (l) menu icon flashes on the **Menu** (9) and the **Digital display** (8) shows 5:00.
4. Now press the **Confirm Button** (r) followed by the **Power button** (t).

The microwave will now run for 5 minutes, creating steam inside the microwave on all of the surfaces. Leave your microwave to stand for 15 minutes once completed to cool.

5. Remove the plug from the wall socket before commencing cleaning.  
**DO NOT** immerse the appliance in water or any other liquids whilst cleaning.
6. Wipe the exterior with clean, soft damp cloth and dry thoroughly.
7. Using a clean soft damp cloth, wipe clean the interior of the door and door seals, interior cavity to remove any spills or spatter and dry thoroughly.
8. Do not remove the waveguide cover. Wipe clean the wave guide cover making sure it is free from food residue, this is located on the cavity wall on the right hand side.
9. Wash the glass turntable, the turntable ring support in warm soapy water and dry thoroughly.

## Servicing

Servicing and repairs should only be carried out by qualified service personnel.

Some components still retain a high voltage charge even when the microwave oven is disconnected from the mains supply, never remove Covers or Guards.

Covers and Guards should only be removed by qualified personnel.

If any part of the oven or cord becomes damaged stop using it immediately and seek advice from qualified service personnel.

## Technical Specification

Rated Voltage	220-240V 50Hz
Rated Input Power (Microwave)	1320W
Microwave Frequency	2450 MHz
Rated Output Power (Microwave)	850W
Rated Power (Grill)	1200W
Model Number	SDA2876
Protection Class	I (This appliance must be earthed)
ErP: Power consumption of equipment in standby mode shall not exceed 1.0W	0.8W
This equipment complies with Annex III of Commission Regulation (EU) 2023/826	

## Recycling Information

### Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

### Disposal of the Product



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.weeeireland.ie](http://www.weeeireland.ie) to find your nearest recycling point.

## Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug **-DISCONNECT FROM THE MAINS-** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

## Customer Support

### Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email:

[help@electroluxsmalldomesticappliance.co.uk](mailto:help@electroluxsmalldomesticappliance.co.uk)


- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Electrolux parts or accessories be used with this appliance.


## Troubleshooting

Problem	Cause	Solution
Microwave won't turn on	Not plugged in properly	Change power Socket, Reset Breaker
	Faulty wall socket	Try plugging the Microwave into a different socket
	Blown Fuse or damaged cable	Inspect the cord for damage. Replace if frayed or melted. Check home fuse box or circuit breaker
Turntable not spinning	Turntable Ring misaligned	Re-seat the turntable ring

## FSC and Safety Marks

**UK  
CA**

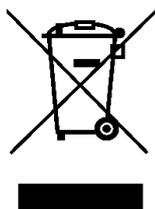

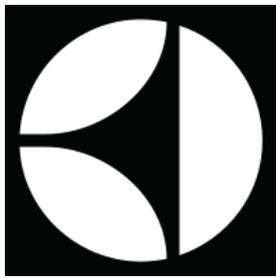

# Electrolux

## WARRANTY

**Thank you for purchasing your Electrolux Product.**

**As part of our commitment to quality, we are offering you an extra 4 years warranty in addition to your 1 year guarantee**

Your Electrolux product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

**To validate your extended 4 year warranty\*please register your purchase online within 28 days of the original purchase date by registering at:**

[help@electroluxsmalldomesticappliance.co.uk](mailto:help@electroluxsmalldomesticappliance.co.uk)

or

**Contact Us:** [www.electroluxfloorcare-sda.co.uk](http://www.electroluxfloorcare-sda.co.uk)

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

ELECTROLUX is a pending or registered trademark used under license from AB Electrolux (publ)

Produced and imported under licence by

Eurosonic Group Limited

Brightgate House

1 Brightgate Way

Manchester M32 0TB UK

EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006

[www.esgltd.com](http://www.esgltd.com)